

 Contents  Inhalt  Contenu  Inhoud  Sisältö  
 Inhoud  Contenido  Conteúdo  Innehåll  
 İçerik



 
x1



x1



x1



x1



x2




x2






x2



x1

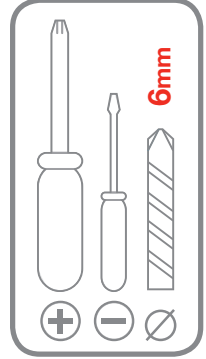


 Getting Started  Erste Schritte  Démarrage  Aan de slag  Aloituspäät  Kom i gång  
 Operazioni preliminari  Para empezar  Para começar  Tipora bħuara  Kom igång

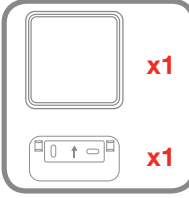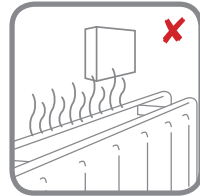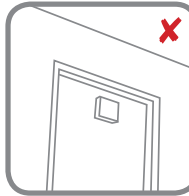


x1



x1

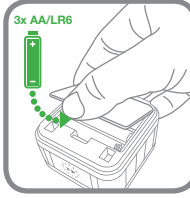

3x AA/LR6

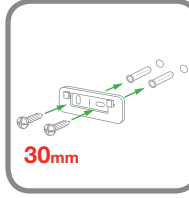


30mm


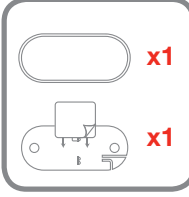
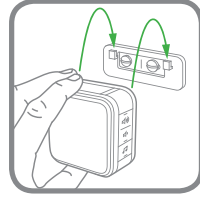


x1



x1

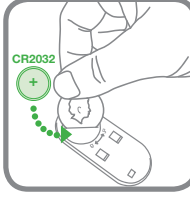


CR2032

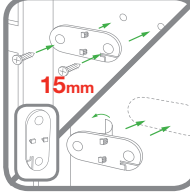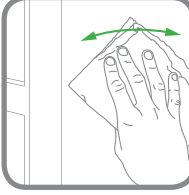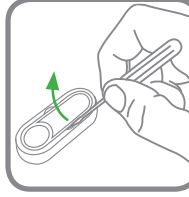






15mm

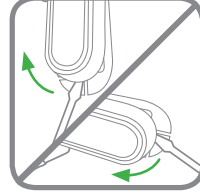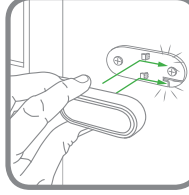

GB Optional Features DE Optionale Funktionen FR Options disponibles NL Opties  
 FI Valinnaiset ominaisuudet IT Funzionalità opzionali ES Opciones disponibles  
 PT Funções opcionais GR Προαιρετικές λειτουργίες SE Valbara verktyg

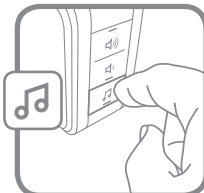

	Hello	Ding Dong	Westminster	Marimba	Piano	Bell	Telephone	Soft Alert
	•	•					•	•
	•	•	•	•			•	•
	•	•	•	•	•	•	•	•

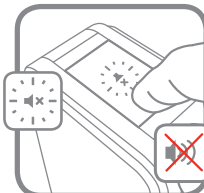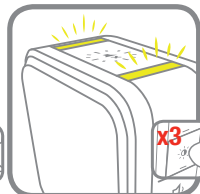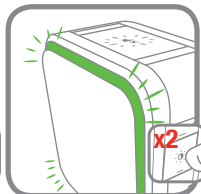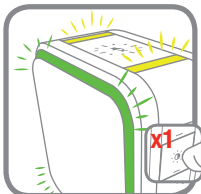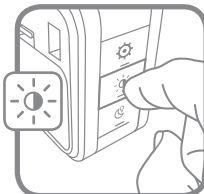

		3Hrs 			6Hrs 
		9Hrs 			12Hrs 

GB Trouble Shooting DE Störungsbehebung FR Dépannage NL Probleemoplossing  
 FI Vianmääritys IT Problemlösning PT Solução de problemas  
 PT Solução de problemas GR αντιμετώπιση προβλημάτων SE Felsökning

[livewell.honeywell.com](http://livewell.honeywell.com)

