



Security Tech Germany

MHU31
BRAVUS

<p>EK-DR-00861/0001</p> <ul style="list-style-type: none"> • Aufbaustift MS Nr.2 • Master pin no.2 brass <p>50KES5202</p>	<ul style="list-style-type: none"> • Aufbaustift MS Nr.4 • Master pin no.4 brass <p>50KES5604</p>	<ul style="list-style-type: none"> • Aufbaustift MS, Nr.6 • Master pin brass, no.6 <p>50KES5206</p>		<ul style="list-style-type: none"> • Zyl.-stift BS Kern • Anti-drilling pin <p>50BSF35</p>	<ul style="list-style-type: none"> • Zyl.-stift BS Kern • Anti-drilling pin <p>50BSF39</p>		<ul style="list-style-type: none"> • Baugruppe Anschlagstift • Assembly unit pressure pin <p>50JAS10BG</p>	<ul style="list-style-type: none"> • Gefahrenkupplung • Emergency coupling <p>50KUP07</p>	
<ul style="list-style-type: none"> • Seitenkernstift Nr.5 • Side core pin, no.5 <p>50KES180S</p>	<ul style="list-style-type: none"> • Seitenkernstift Nr.T • Side core pin, no.T <p>50KES180T</p>	<ul style="list-style-type: none"> • Seitenkernstift, Nr.U • Side core pin, no.U <p>50KES180U</p>	<ul style="list-style-type: none"> • Seitenkernstift, Nr.W • Side core pin, no.W <p>50KES180W</p>				<ul style="list-style-type: none"> • Passivstift, Nr.B • Passive pin, no.B <p>50KES260B</p>	<ul style="list-style-type: none"> • BG Passivstift Nr.F • Assembly unit passive pin, Nr.F <p>50KES190FBG</p>	<ul style="list-style-type: none"> • BG Passivstift, Nr.D • Assembly unit passive pin, Nr.D <p>50KES190DBG</p>
<ul style="list-style-type: none"> • Gehäusestift Zentrierfunktion,5mm • Centering pin brass, 5 mm <p>50GEZ0605</p>	<ul style="list-style-type: none"> • Gehäusestift Stahl, 5 mm • Housing pin steel, 5 mm <p>50GES0405</p>	<ul style="list-style-type: none"> • Diabolstif MS 4,5 mm • Mushroom pin brass, 4,5 mm <p>50GED01</p>	<ul style="list-style-type: none"> • Gehäusestift Stahl, 3 mm • Housing pin steel, 3 mm <p>50GES0403</p>	<ul style="list-style-type: none"> • Gehäusestift K14 • Housing pin K14 <p>50GES74</p>	<ul style="list-style-type: none"> • Gehäusefeder • Spring for housing K14 <p>50FED09</p>	<ul style="list-style-type: none"> • Gehäusefeder • Spring for housing <p>50FED03</p>		<ul style="list-style-type: none"> • Gehäusefeder • Spring for housing <p>50FED46</p>	
<ul style="list-style-type: none"> • Kernstift, Stahl, Nr.1 • Core pin steel, no.1 <p>50KES3401</p>	<ul style="list-style-type: none"> • Kernstift, Stahl, Nr.2 • Core pin steel, no.2 <p>50KES3402</p>	<ul style="list-style-type: none"> • Kernstift Stahl, Nr.3 • Core pin steel, no.3 <p>50KES3403</p>	<ul style="list-style-type: none"> • Kernstift Stahl, Nr.4 • Core pin steel, no.4 <p>50KES3404</p>	<ul style="list-style-type: none"> • Kernstift Stahl, Nr.5 • Core pin steel, no.5 <p>50KES3405</p>	<ul style="list-style-type: none"> • Kernstift Stahl, Nr.6 • Core pin steel, no.6 <p>50KES3406</p>	<ul style="list-style-type: none"> • Kernstift Stahl, Nr.7 • Core pin steel, no.7 <p>50KES3407</p>		<ul style="list-style-type: none"> • Federscheibe • Core retaining clip <p>50FSA01</p>	
<ul style="list-style-type: none"> • Kernstift NS Nr.1 • Core pin nickel silver, no.1 <p>50KES3301</p>	<ul style="list-style-type: none"> • Kernstift N Nr.2 • Core pin nickel silver, no.2 <p>50KES3302</p>	<ul style="list-style-type: none"> • Kernstift NS Nr.3 • Core pin nickel silver, no.3 <p>50KES3303</p>	<ul style="list-style-type: none"> • Kernstift NS Nr.4 • Core pin nickel silver, no.4 <p>50KES3304</p>	<ul style="list-style-type: none"> • Kernstift NS Nr.5 • Core pin nickel silver, no.5 <p>50KES3305</p>	<ul style="list-style-type: none"> • Kernstift NS Nr.6 • Core pin nickel silver, no.6 <p>50KES3306</p>	<ul style="list-style-type: none"> • Kernstift NS Nr.7 • Core pin nickel silver, no.7 <p>50KES3307</p>		<ul style="list-style-type: none"> • Verschlussplättchen • Sealable plate <p>50VSP14</p>	<ul style="list-style-type: none"> • Verdreh-schutzstift • Anti-rotation pin <p>50VSP15</p>