



CESTELLI - Baskets




Art. 1816 - Wire

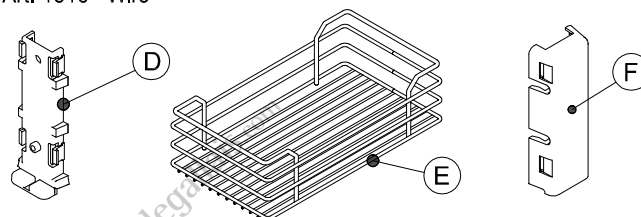

Art. 1204W - DeLuxe

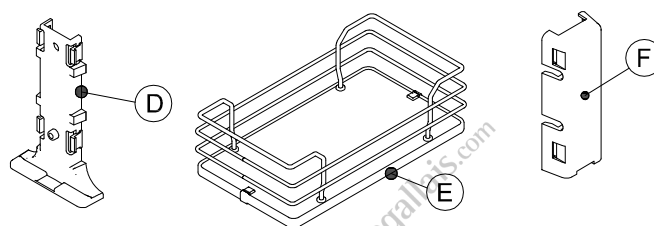


Art. 1204E - Ellite

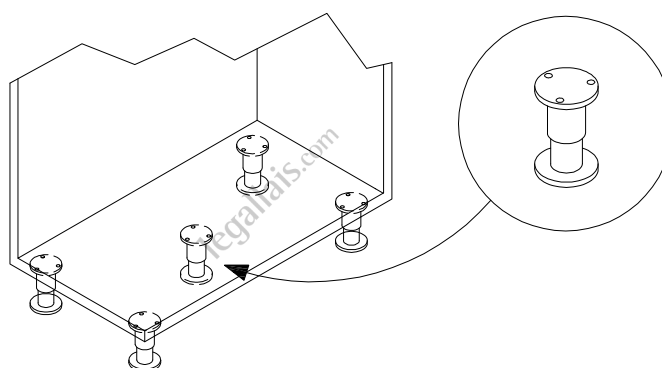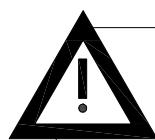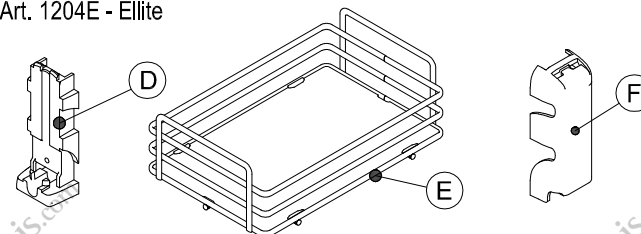


E' consigliato l'utilizzo di un piedino centrale
We recommend the use of a central foot


1

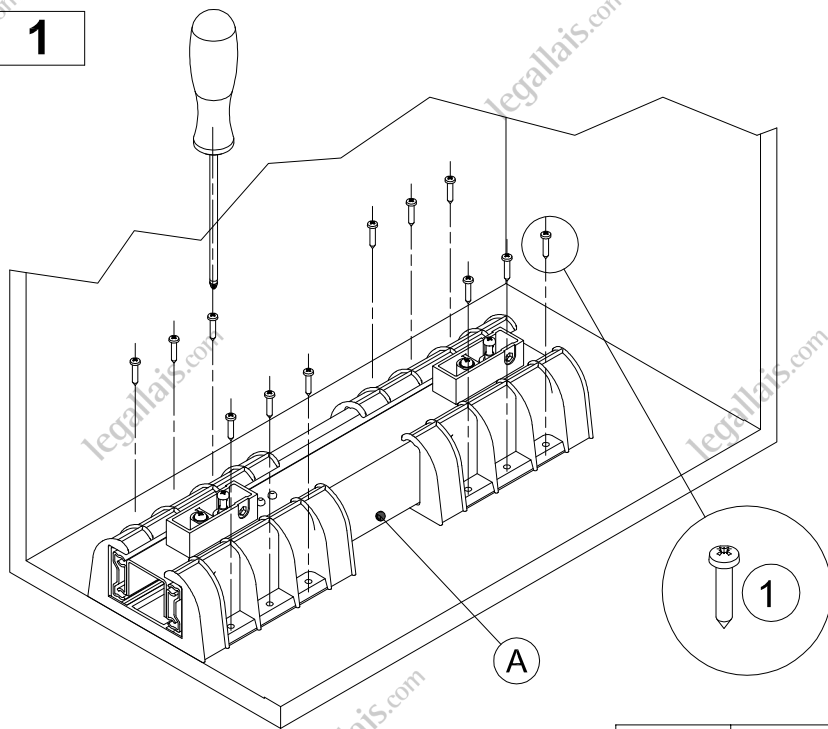


L [mm]	A [mm]
300	97
400	107
450	157
500	207
600	307

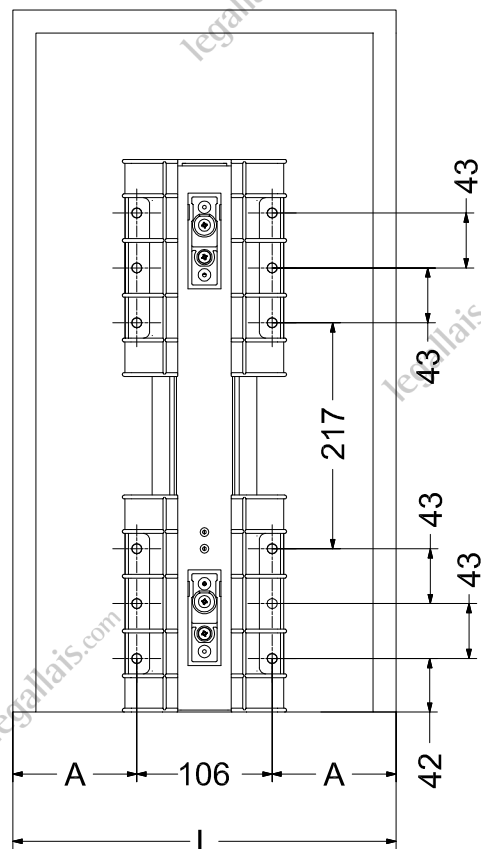





2

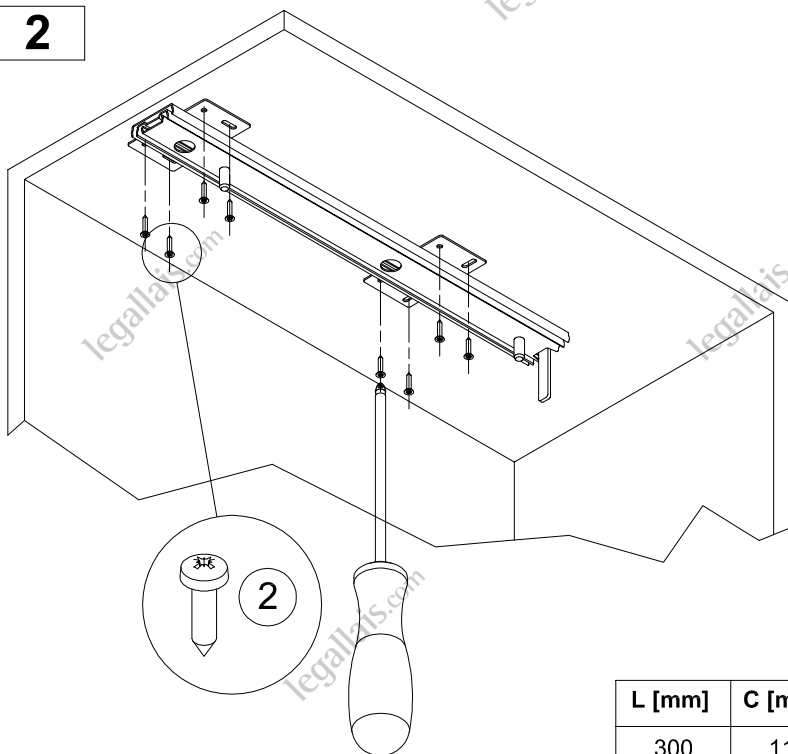


L [mm]	C [mm]
300	118
400	168
450	193
500	218
600	268

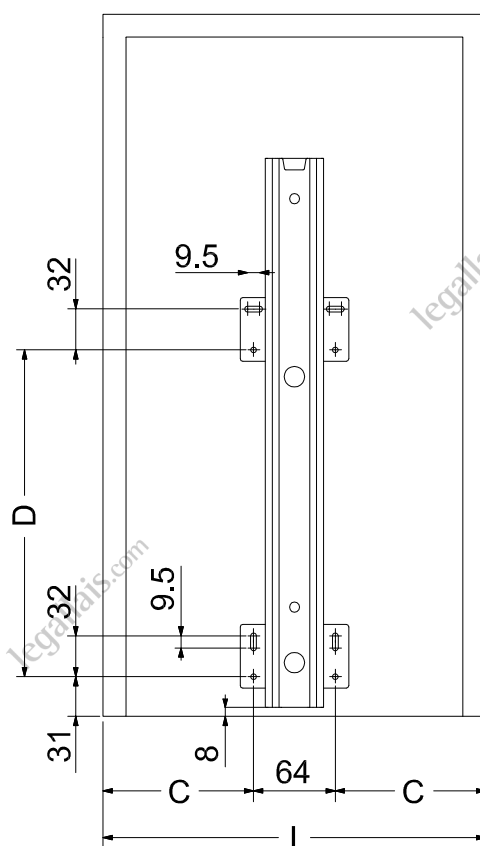


3

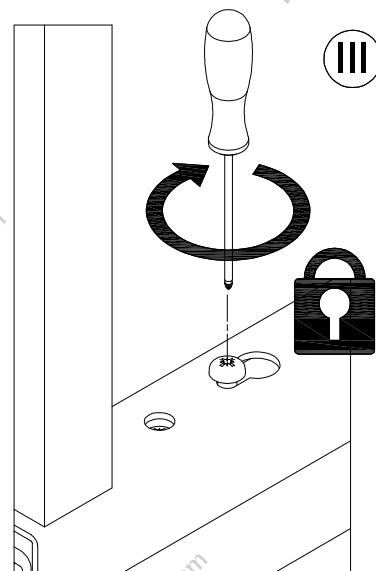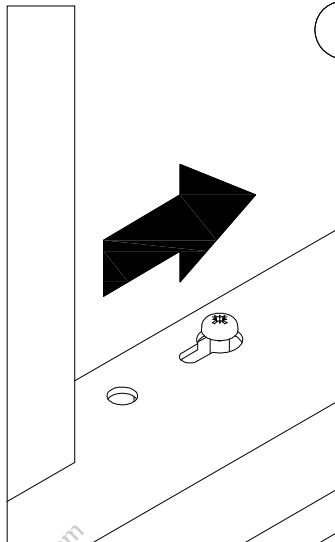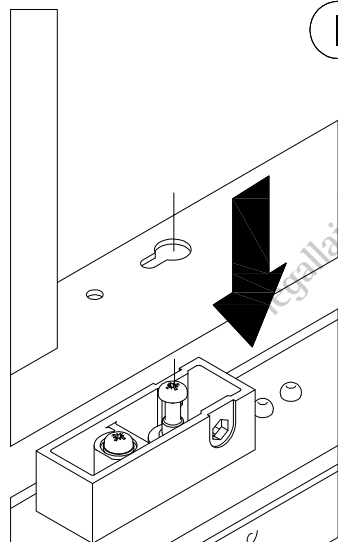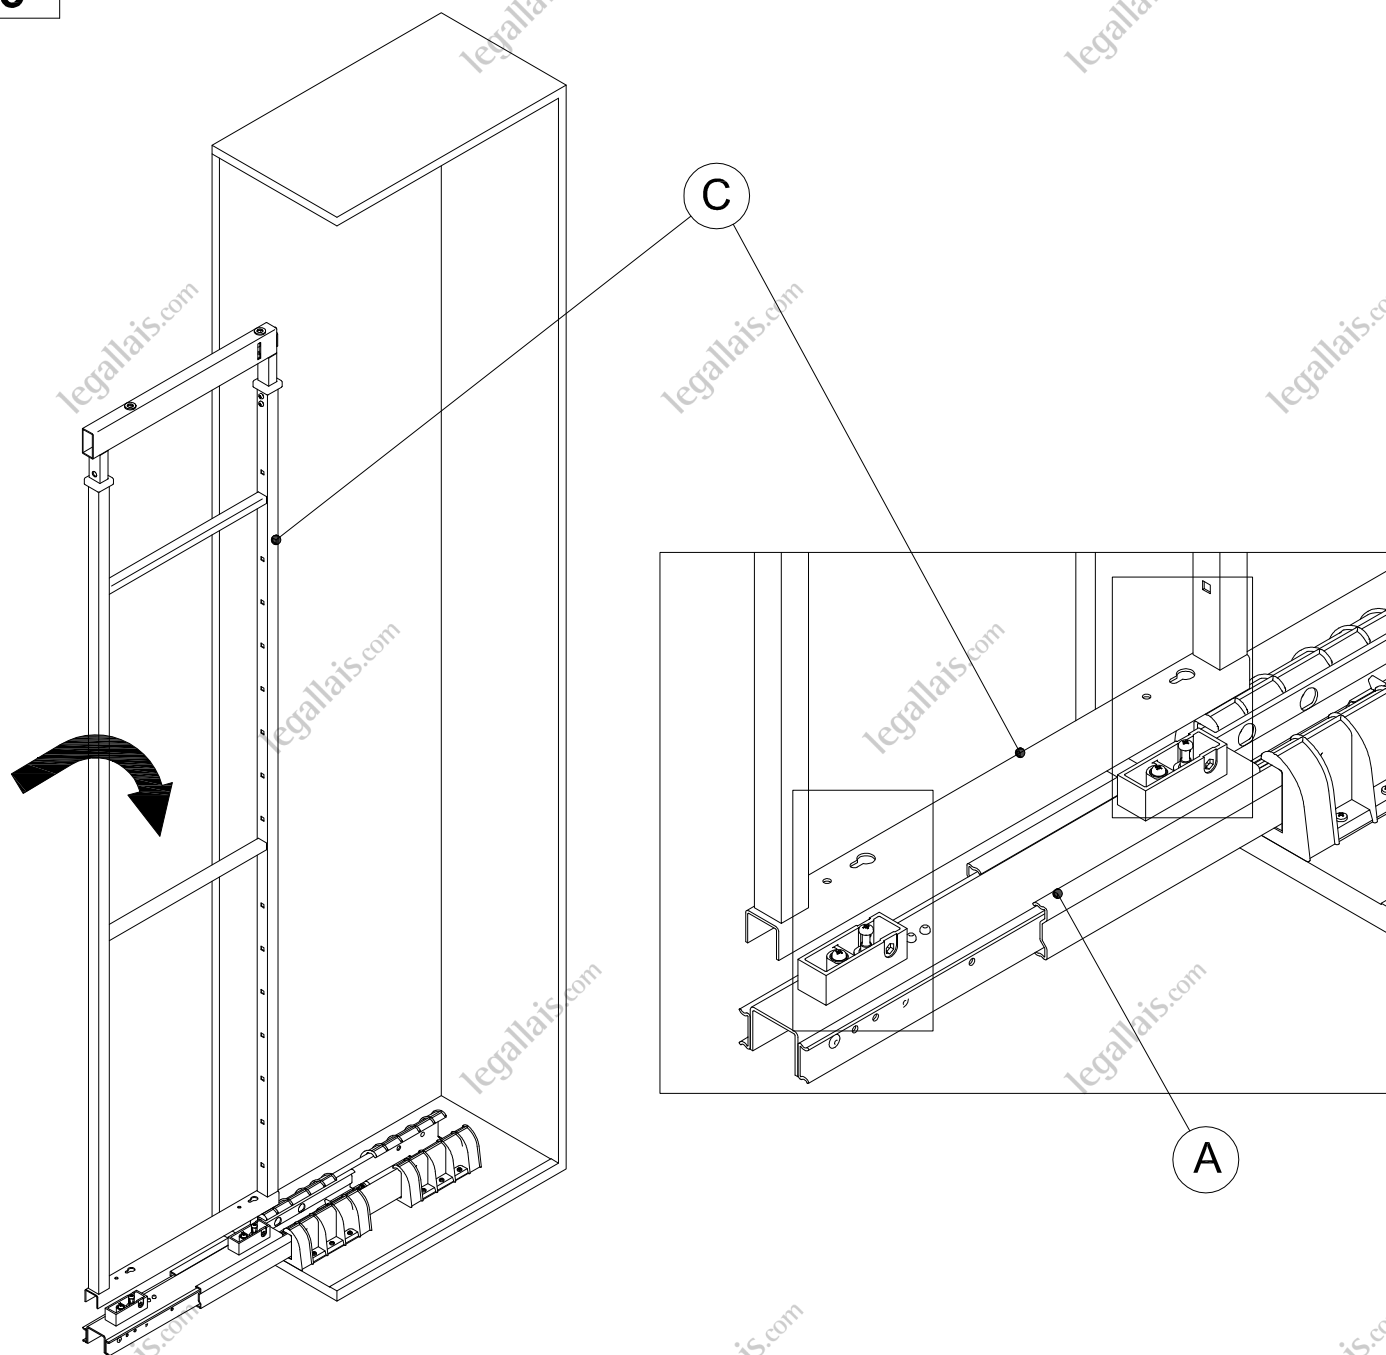


4

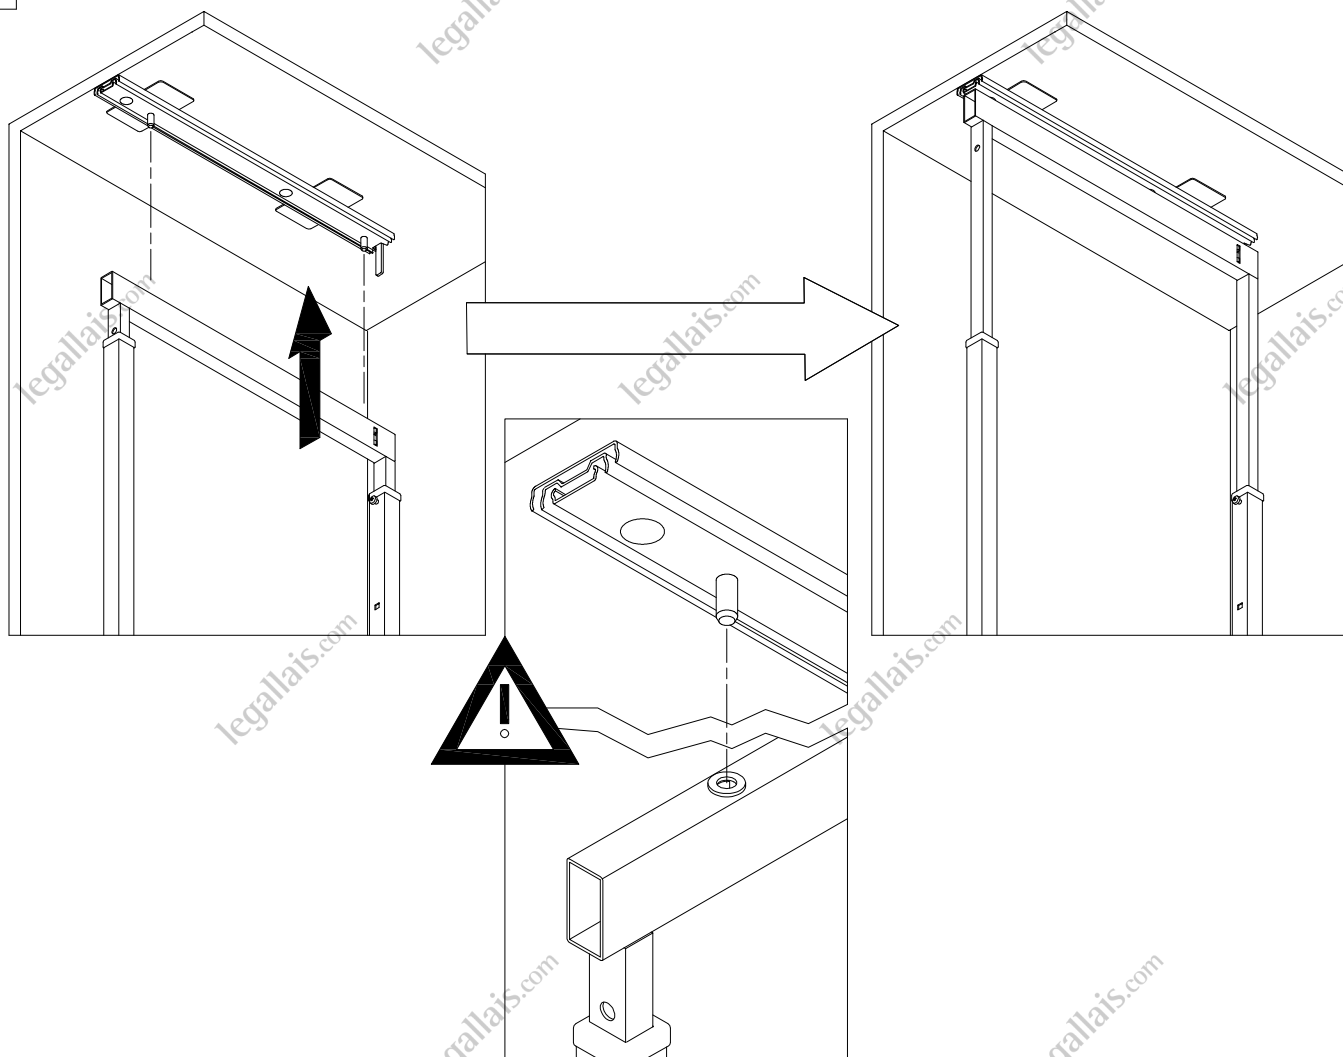


5





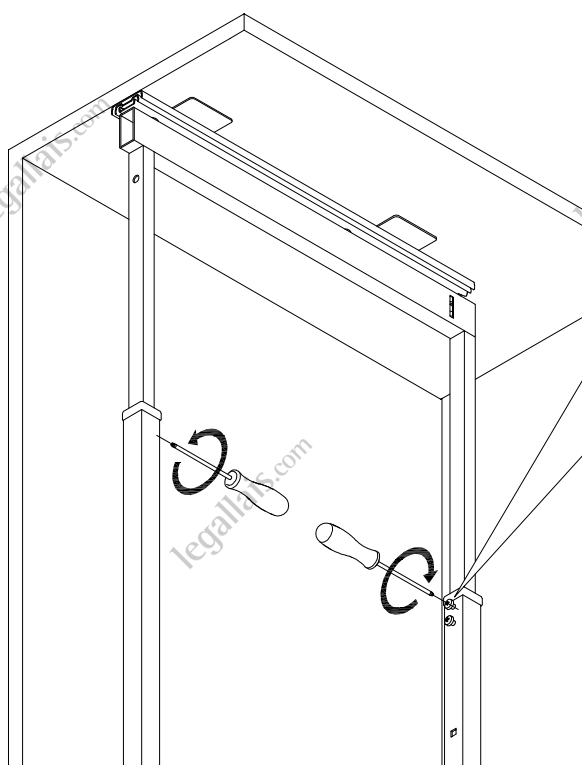


a

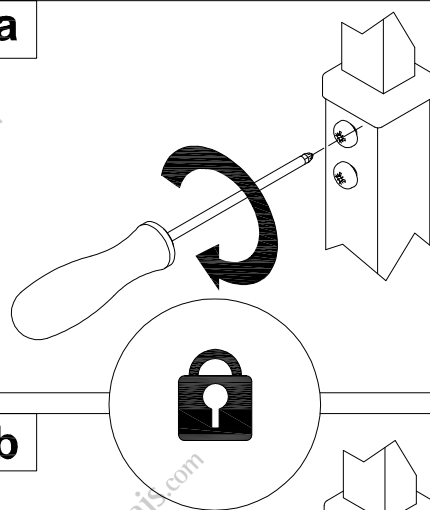



b

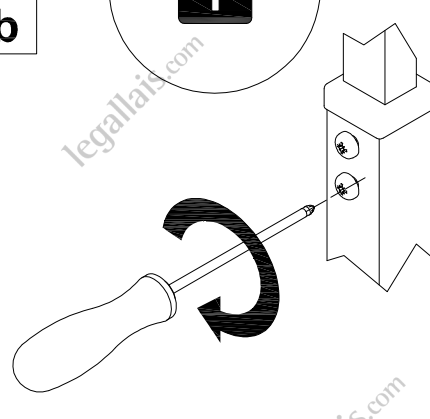

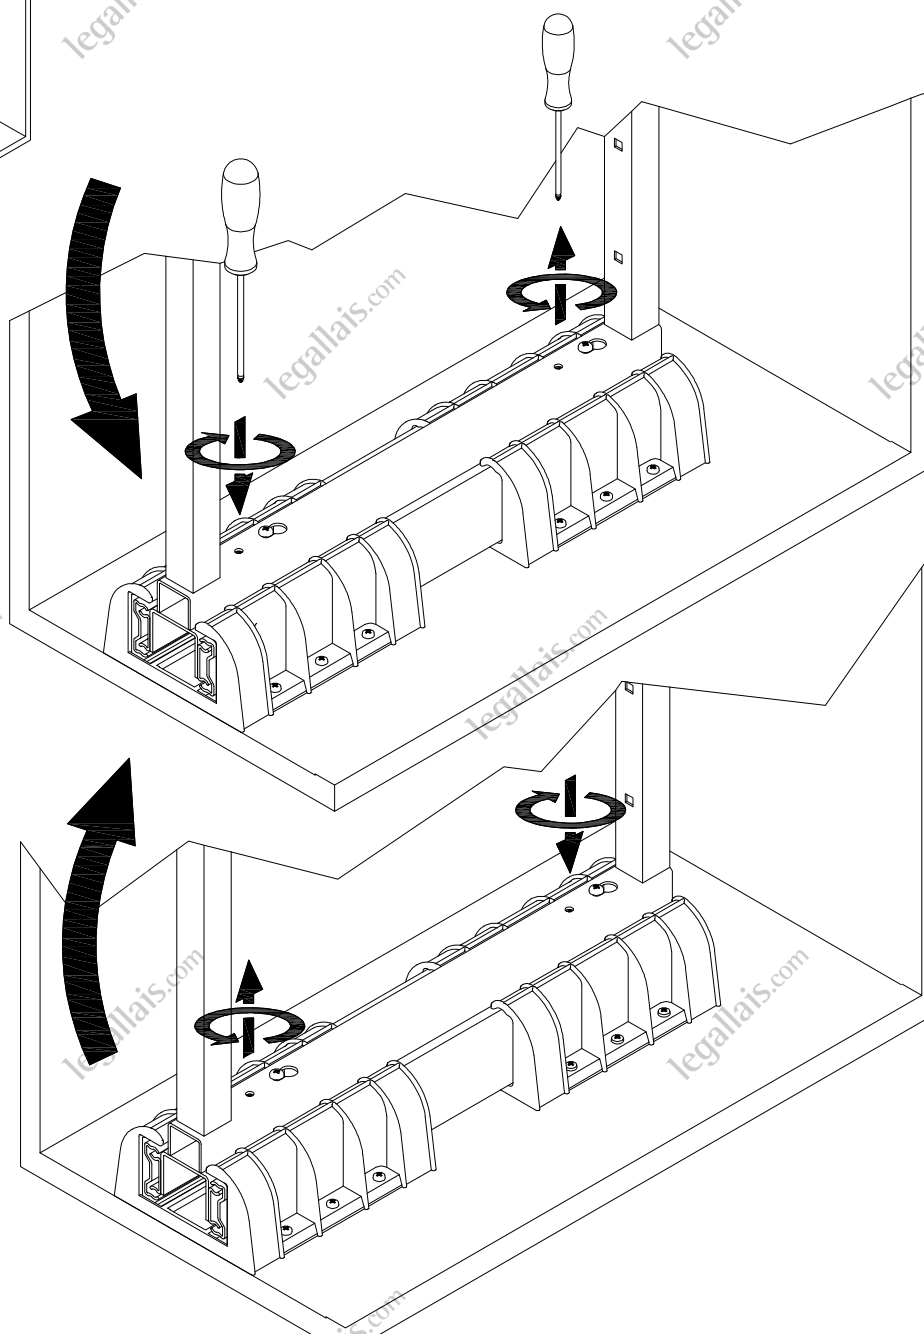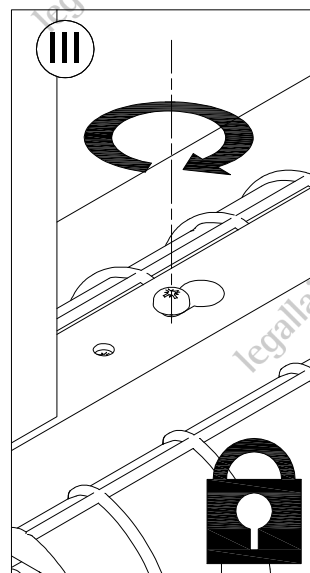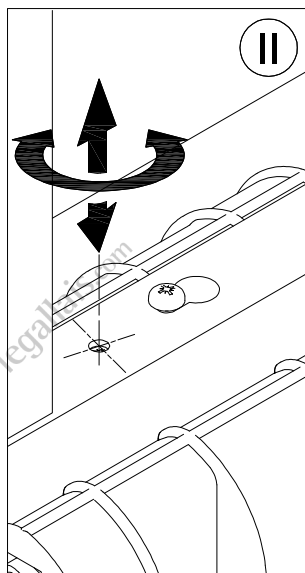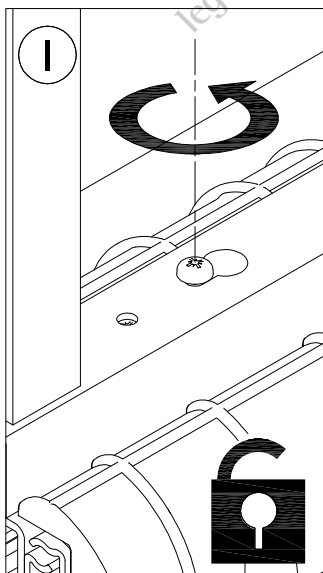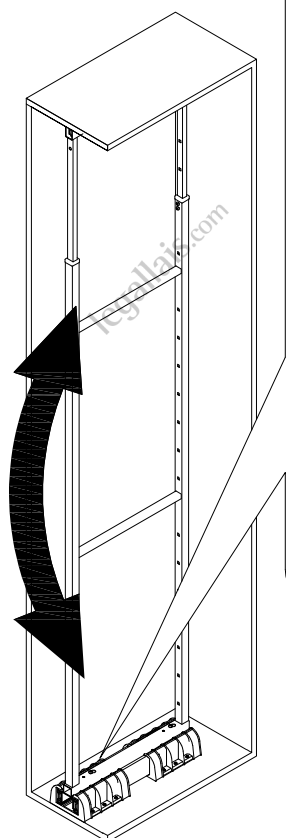


MONTAGGIO CESTI - BASKET ASSEMBLY Art. 1852 - 1852W


a

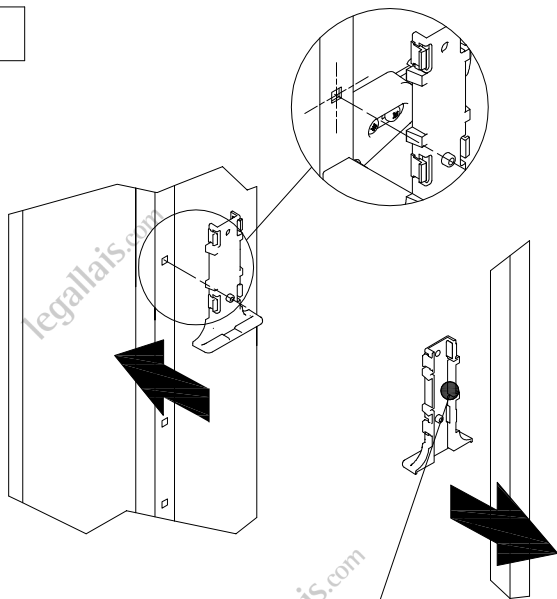


D




b

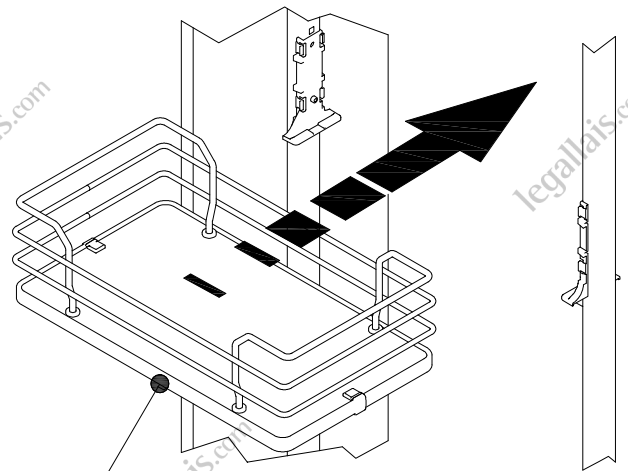

1852W

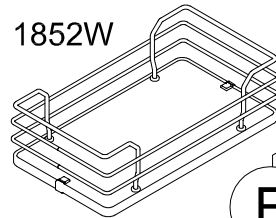


1852

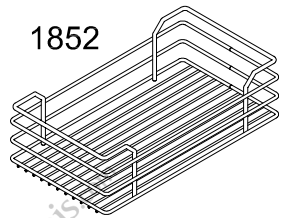


E


c

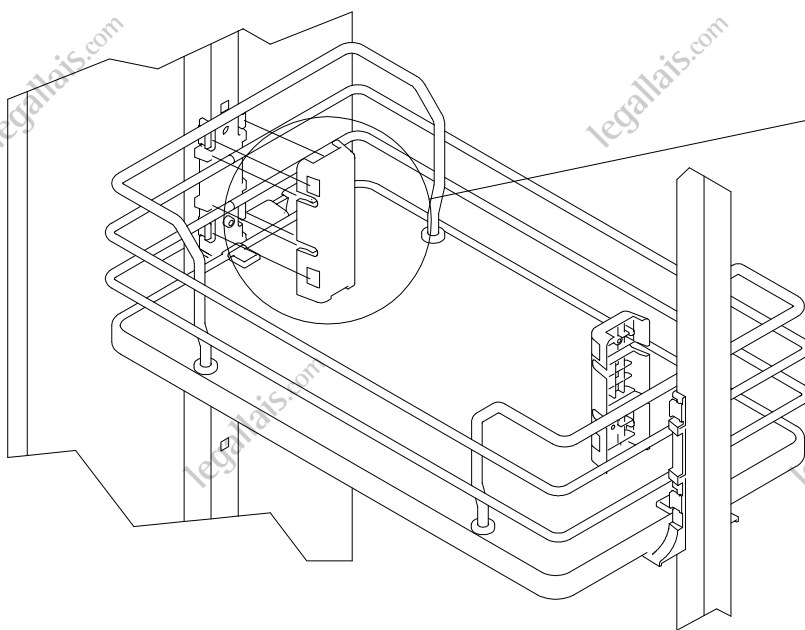




1852



1852W




F

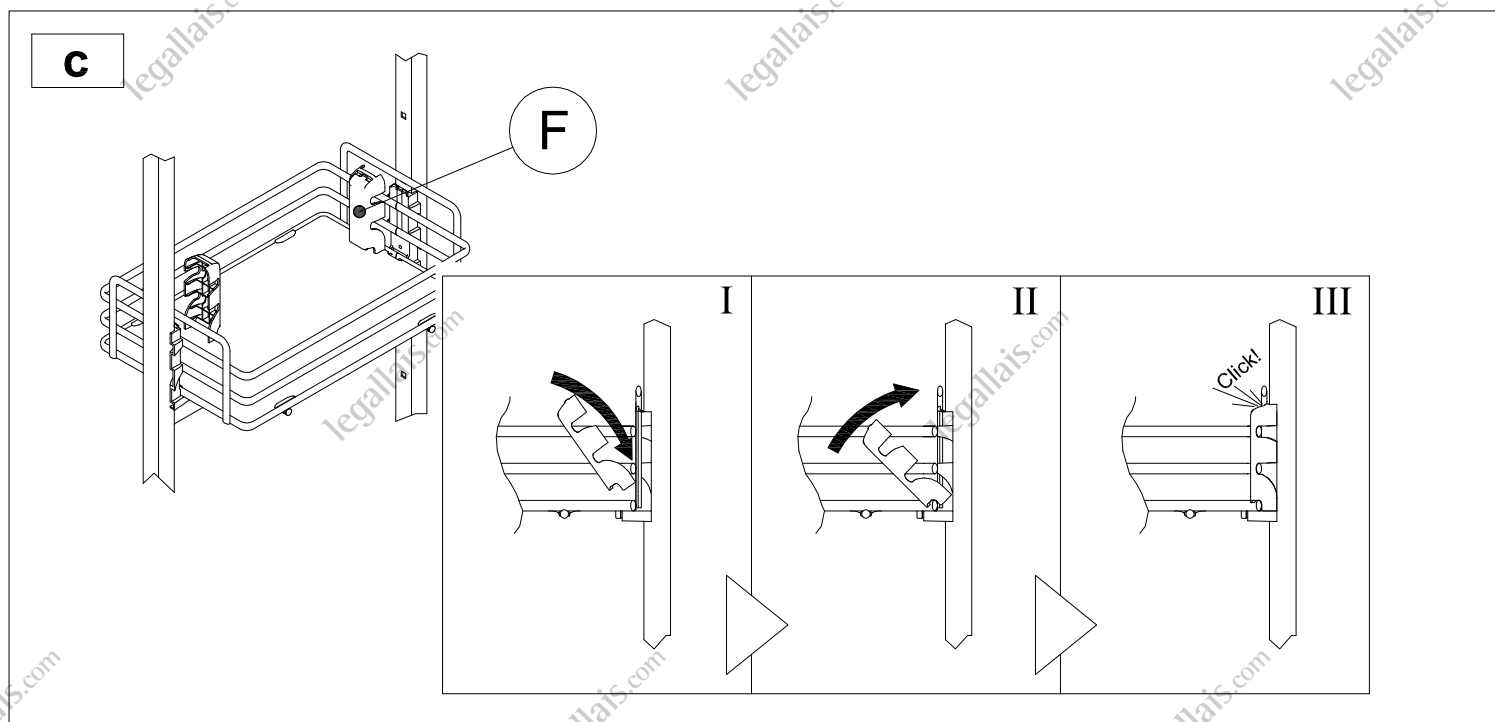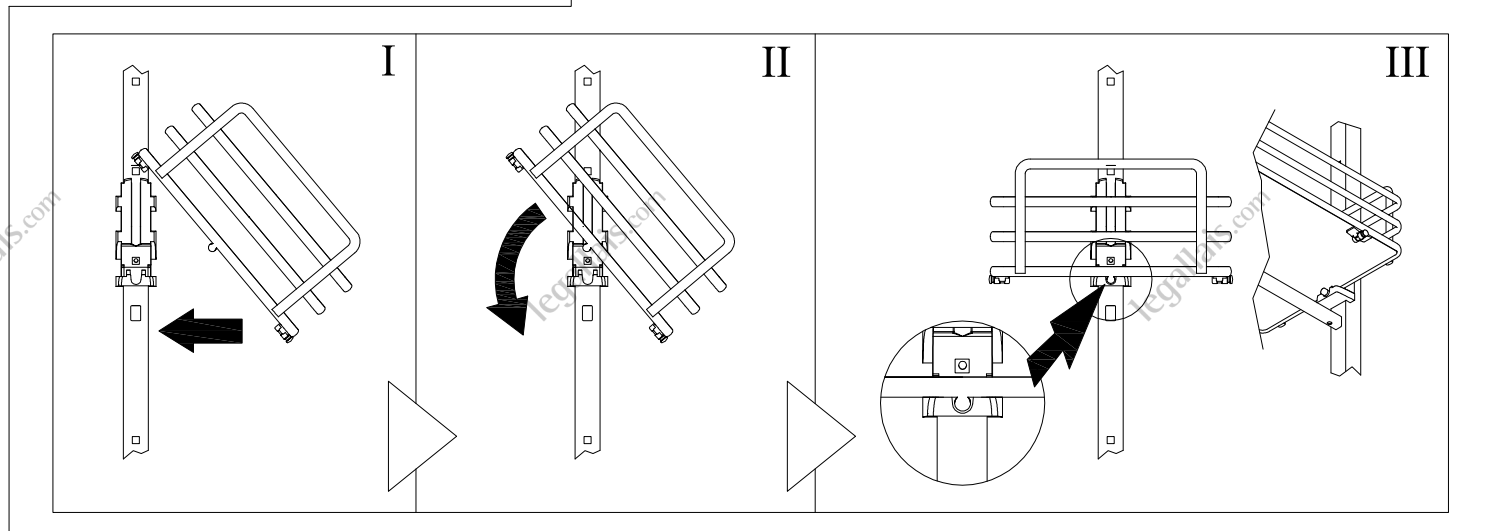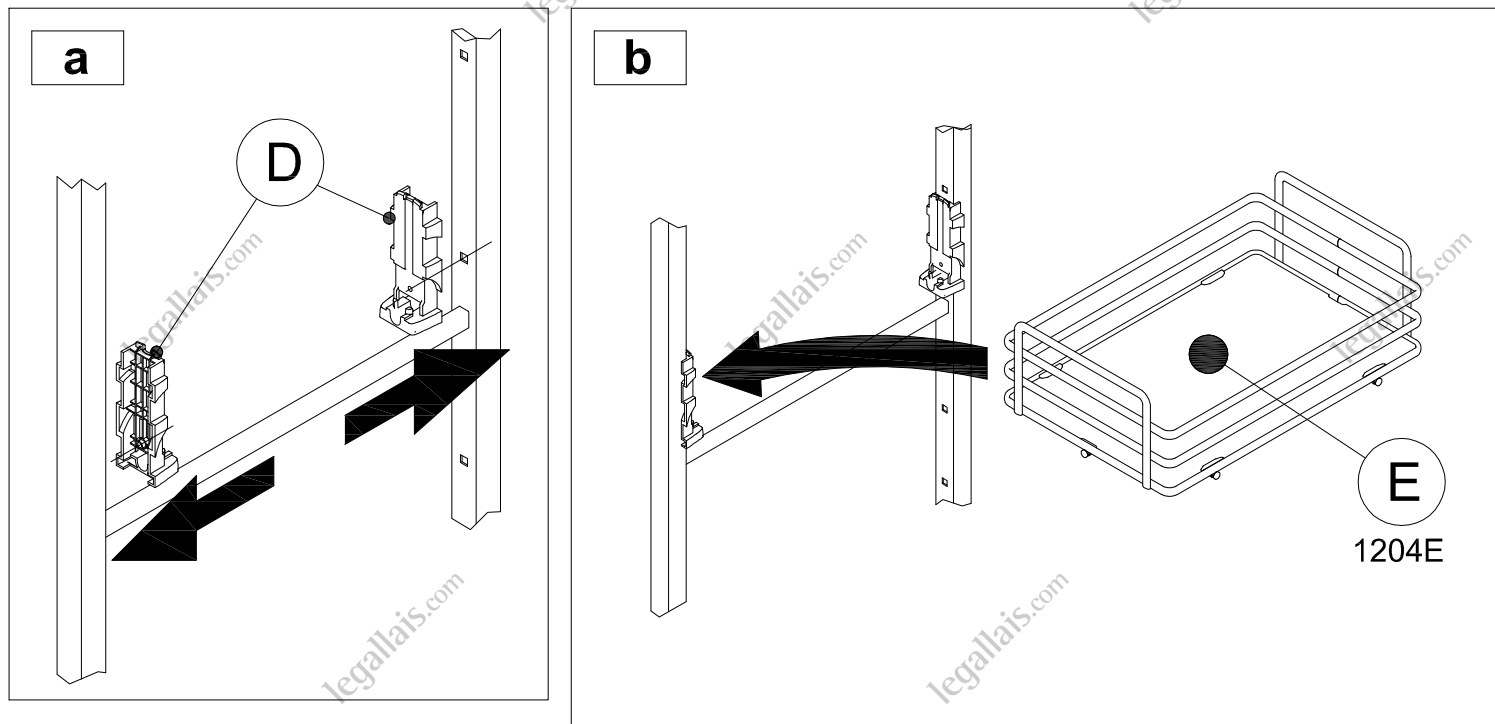

MONTAGGIO CESTO AGGIUNTIVO - *Additional Basket Assembly*

a



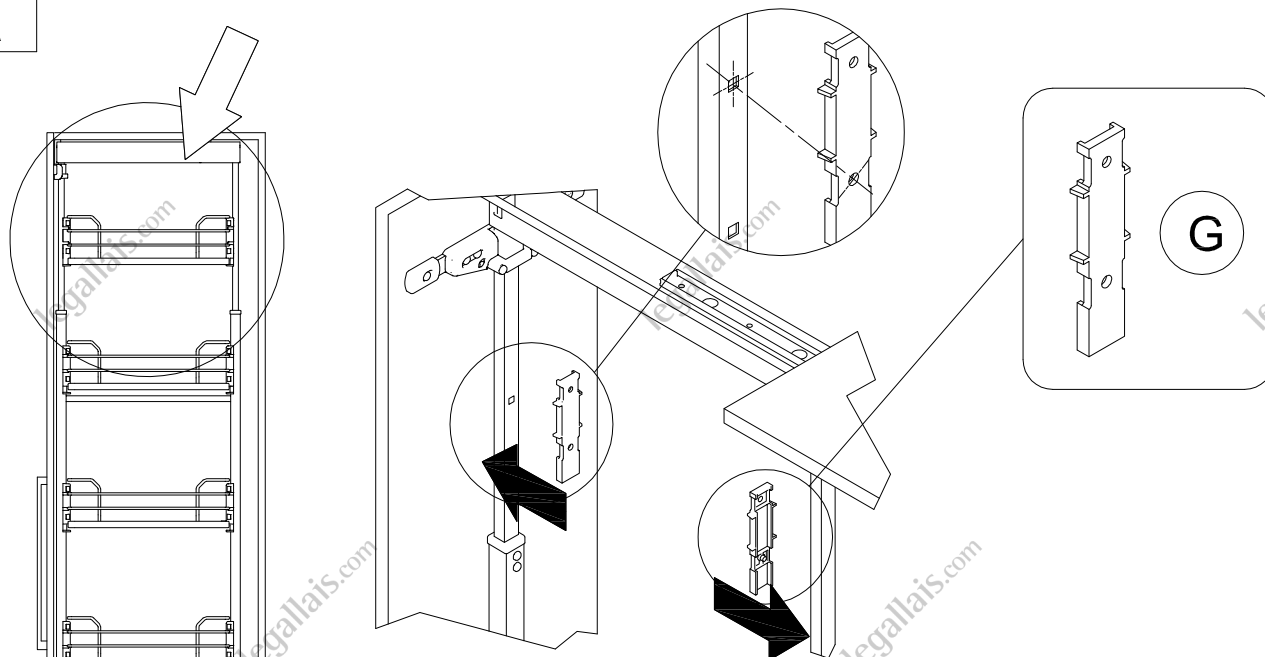


b


1852

1852W

1852E

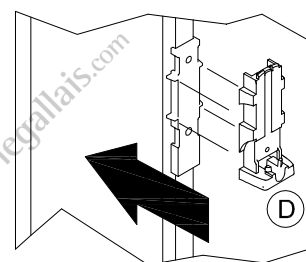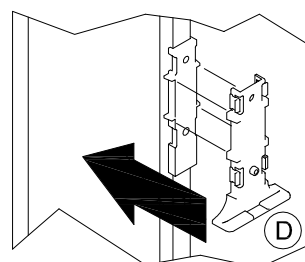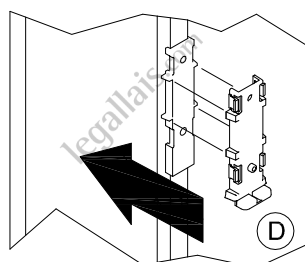

c

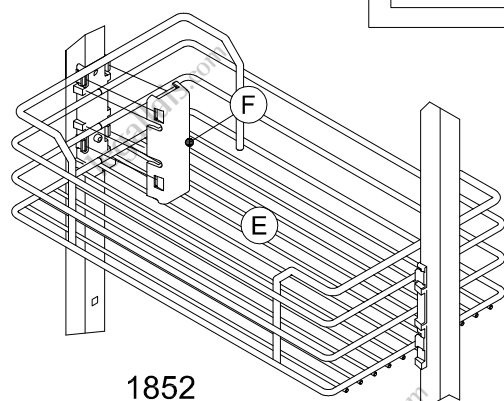

1852

1852W

1852E

