

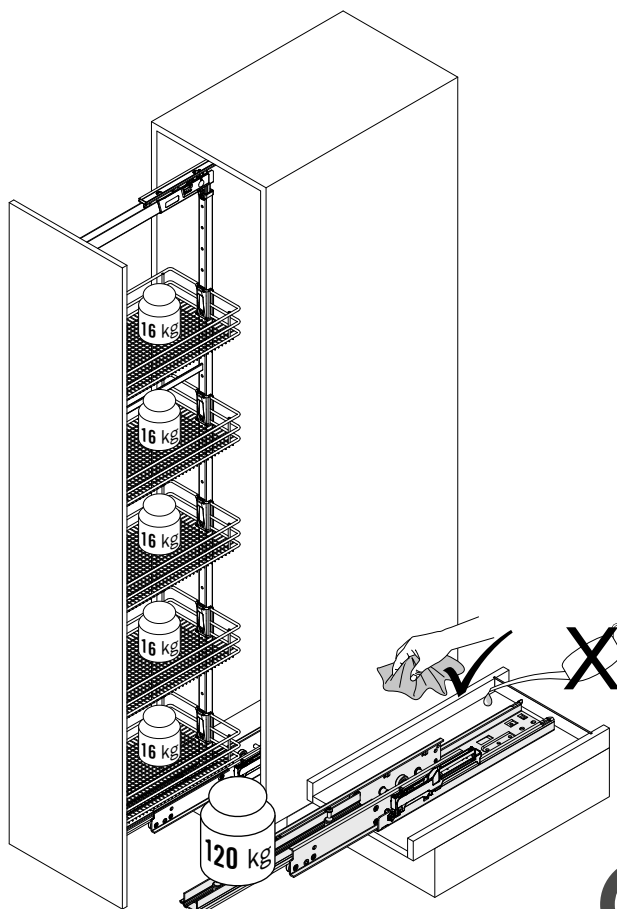



# VS TAL<sup>®</sup> Larder 500



MONTAGEANLEITUNG / ASSEMBLY MANUAL

**VAUTH  
SAGEL**

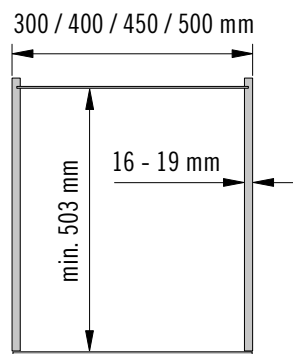

PZ 2  
SW 4  
Ø 5 mm

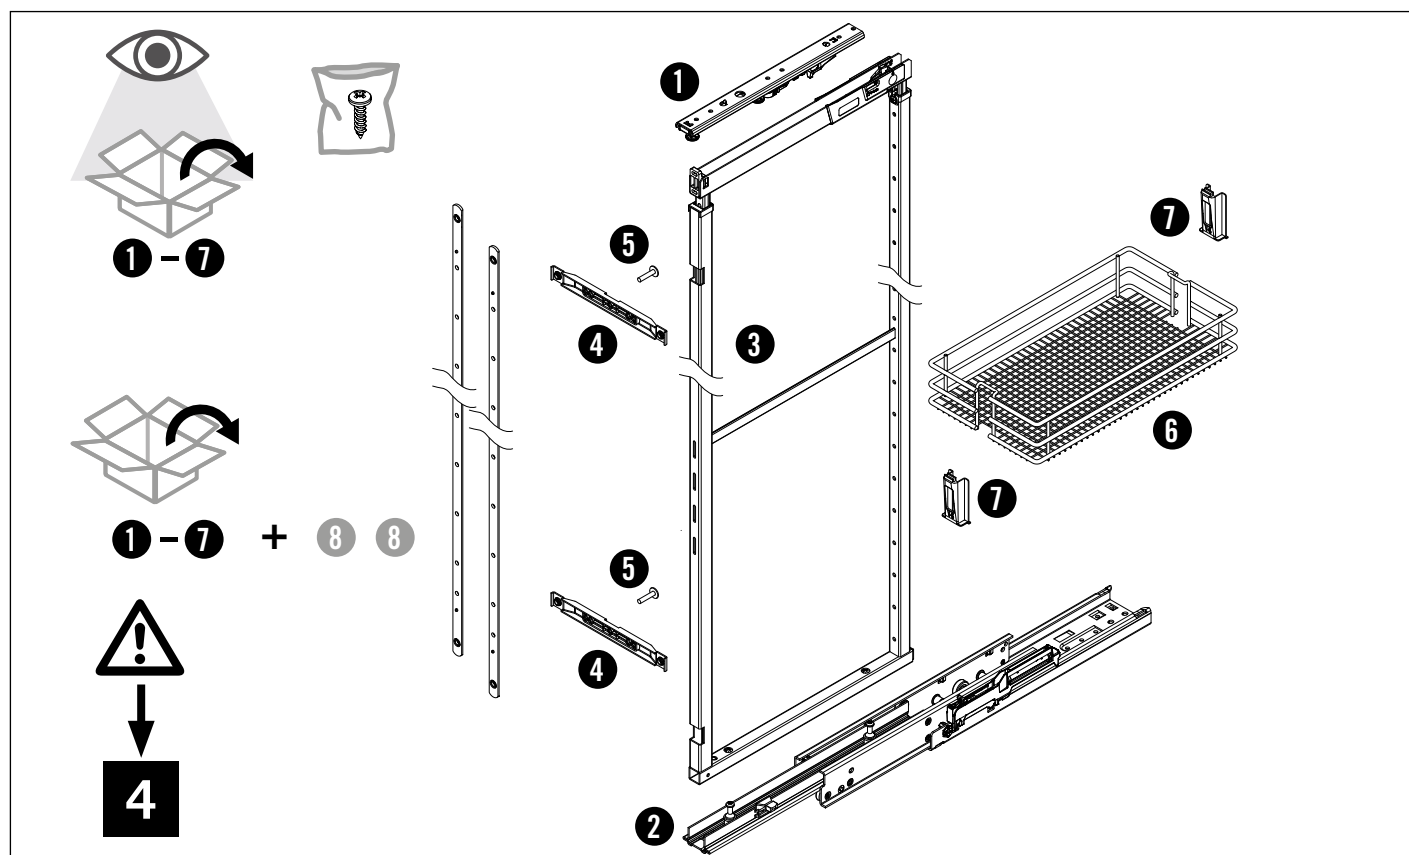


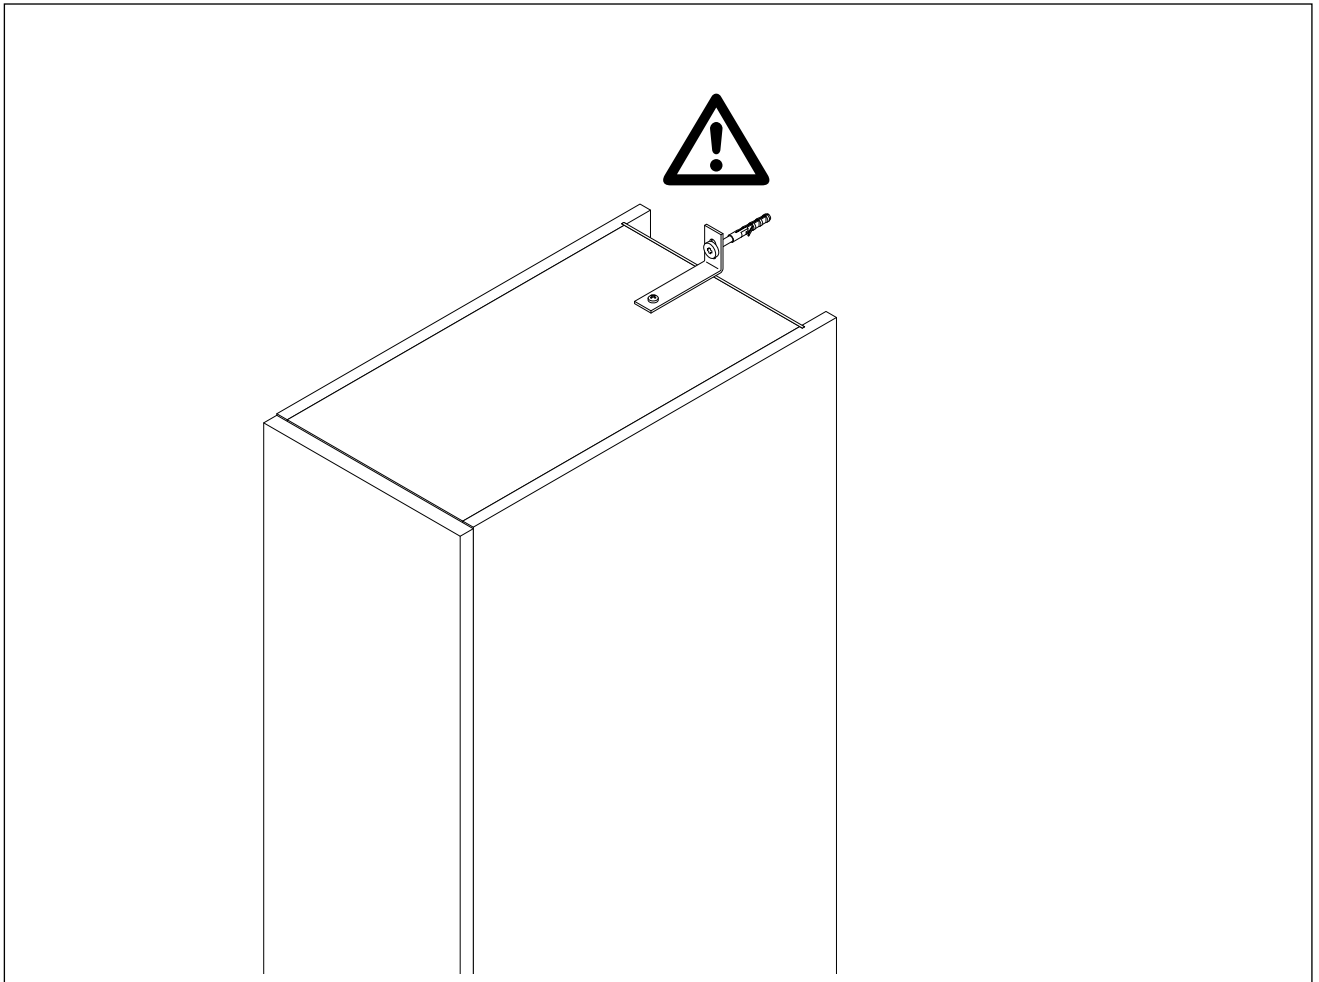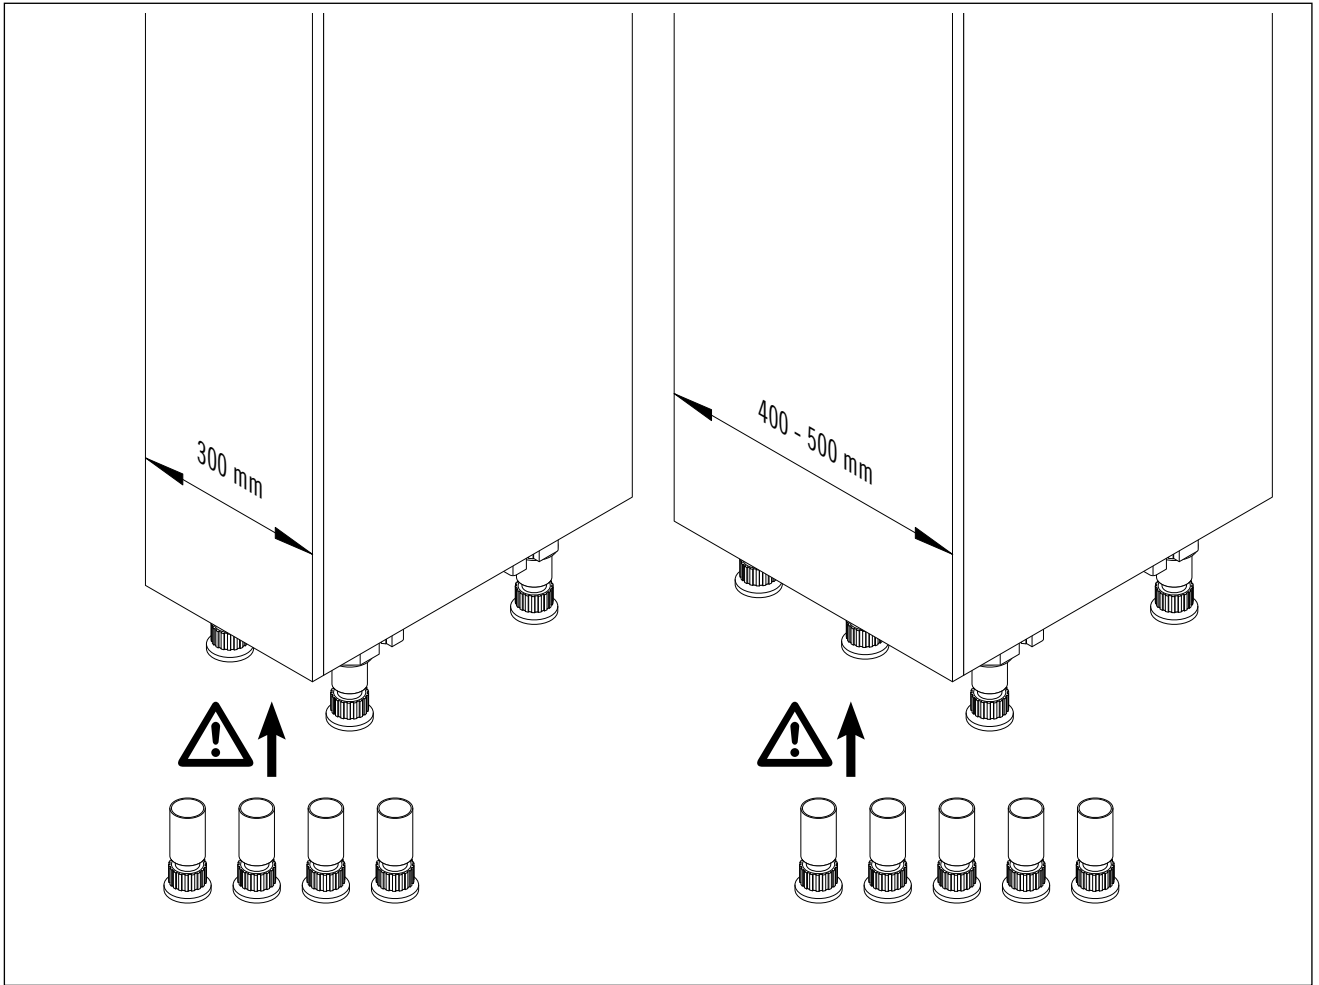



**1**



**A**





5 mm

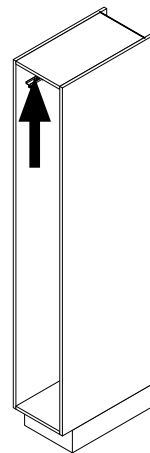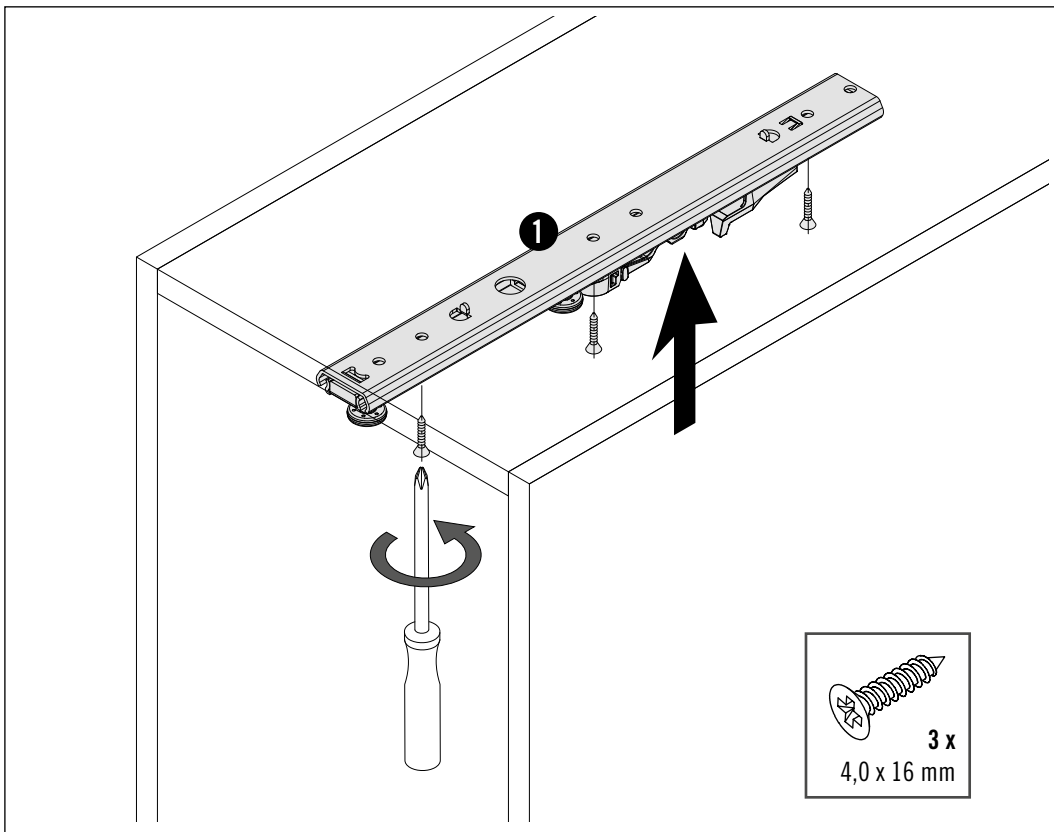



**2**





**B**

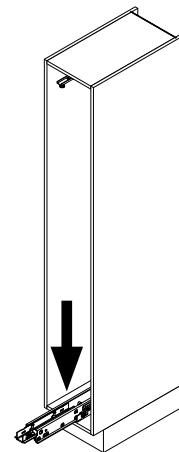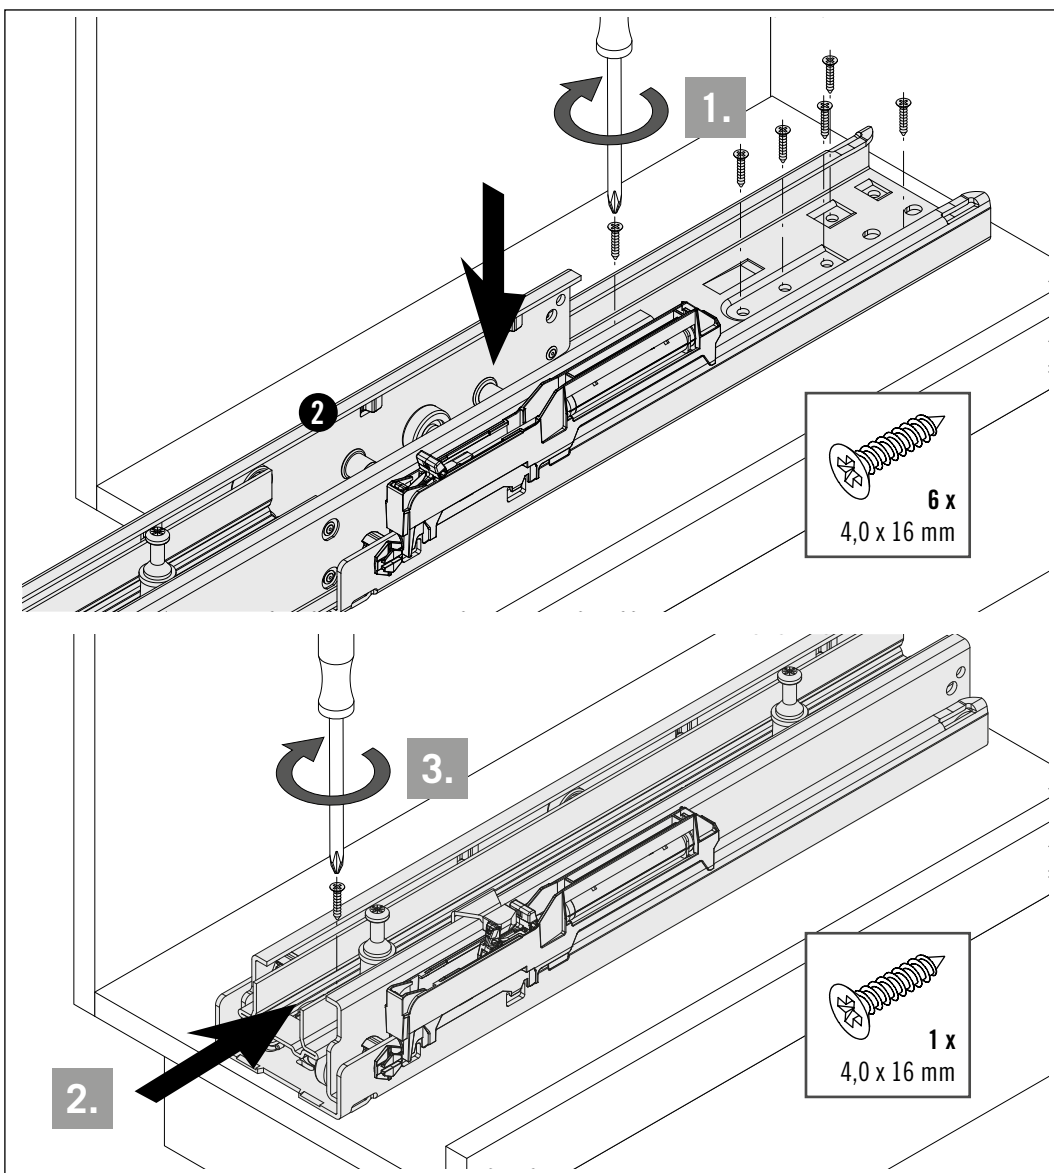



**3**

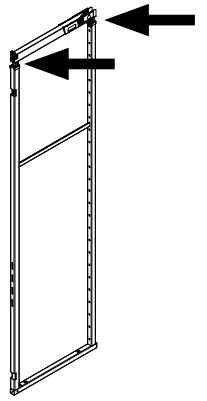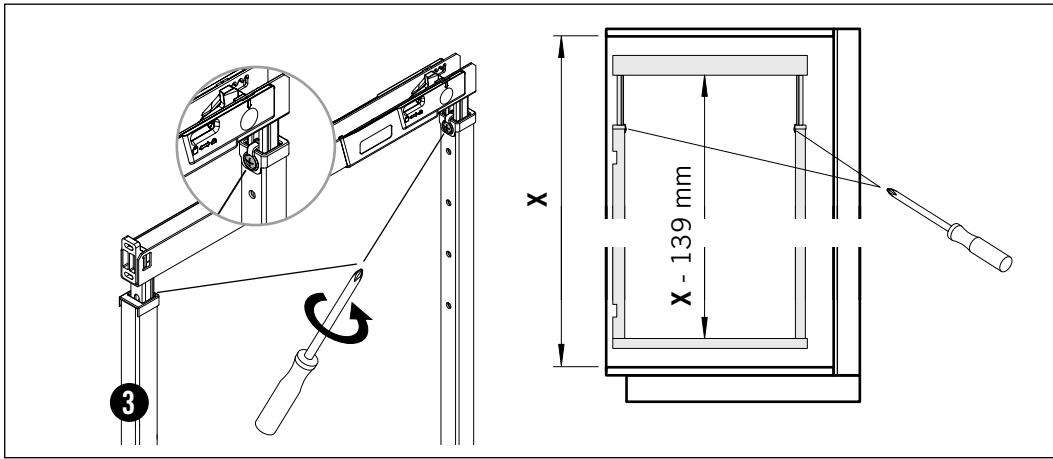



**4**

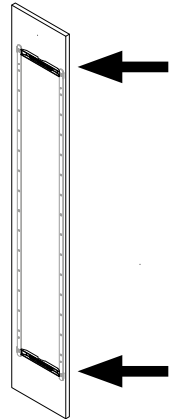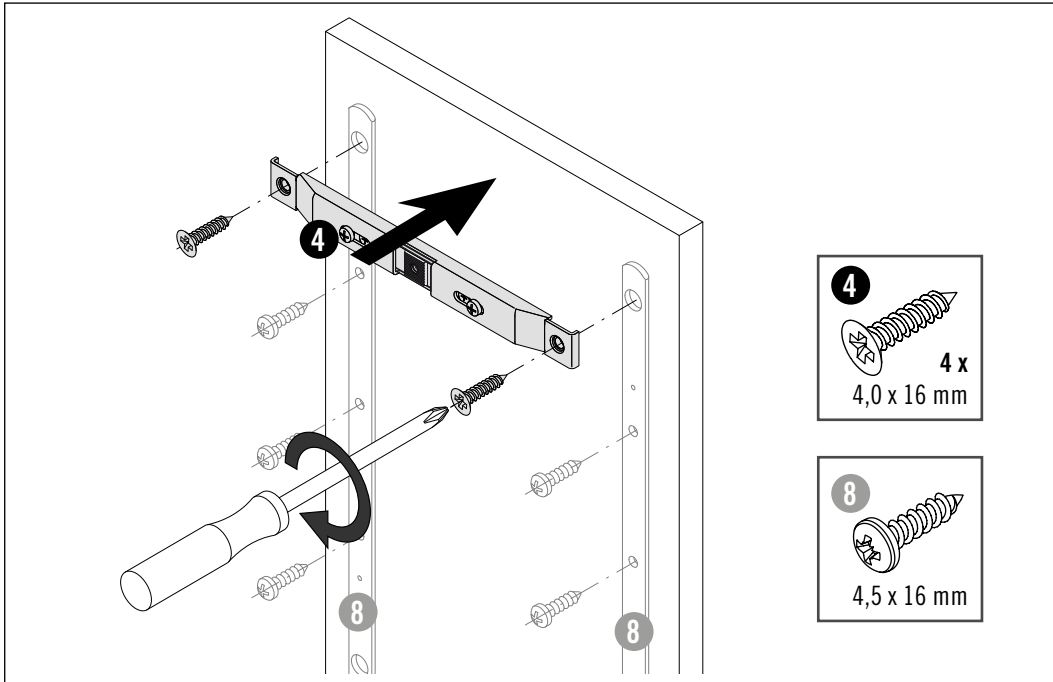



**5**

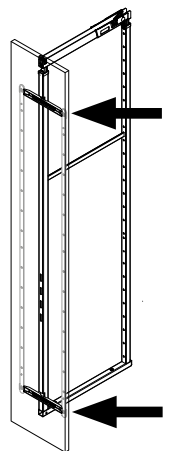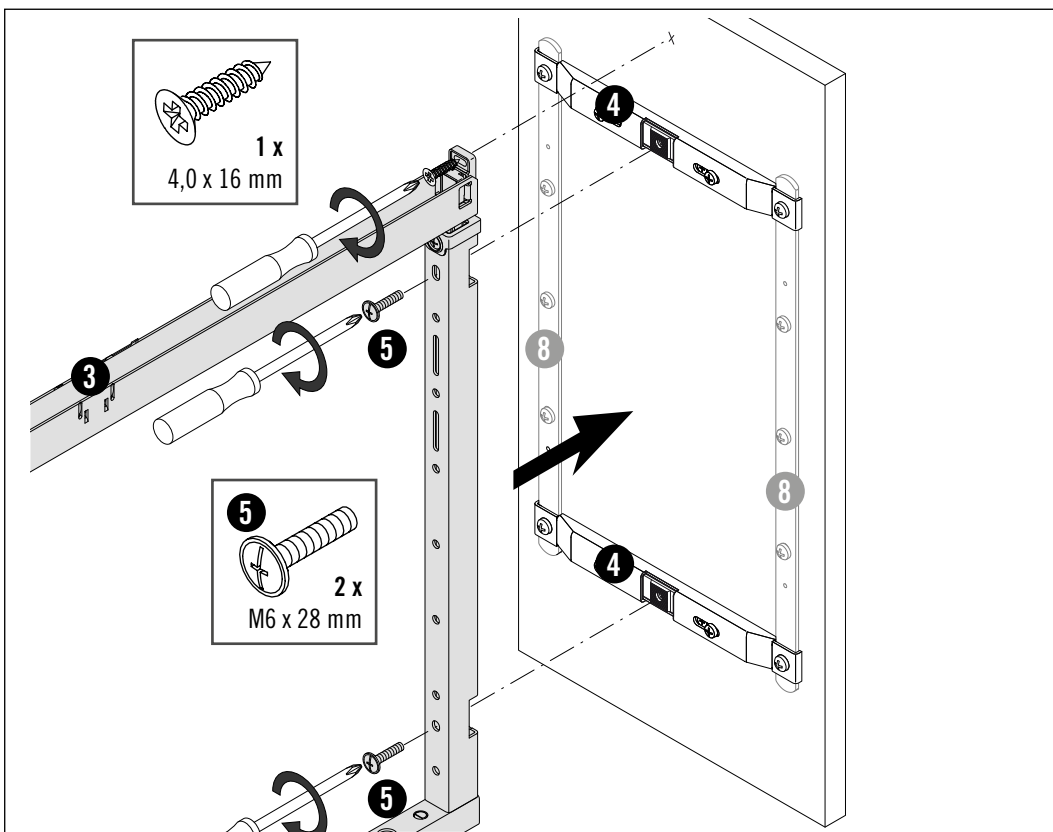



6

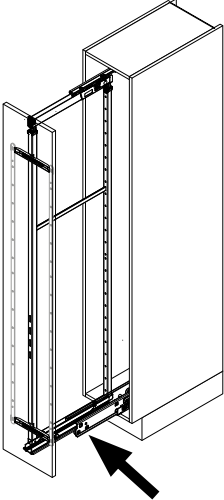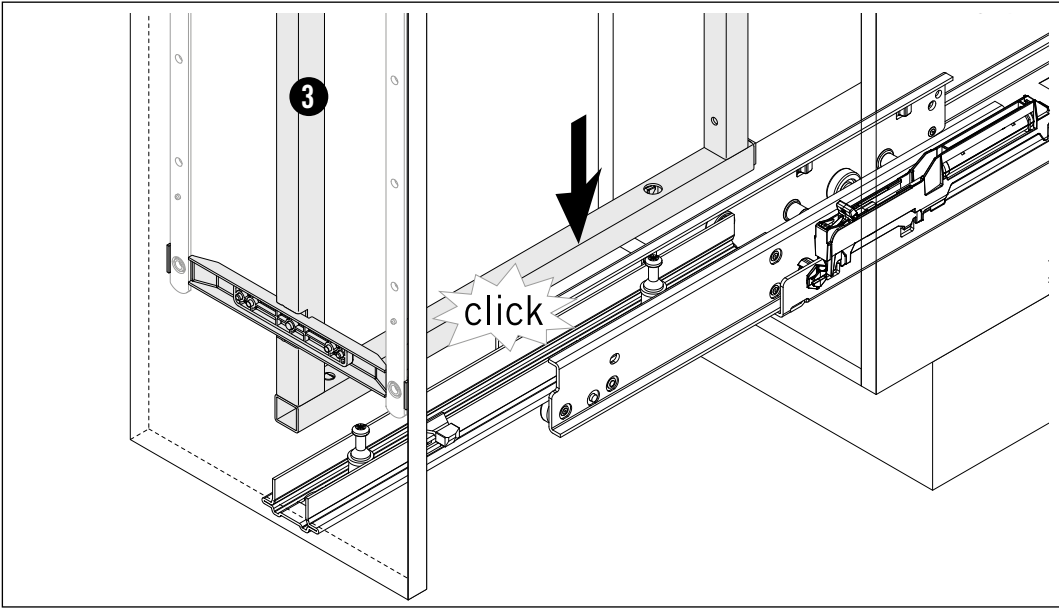






7

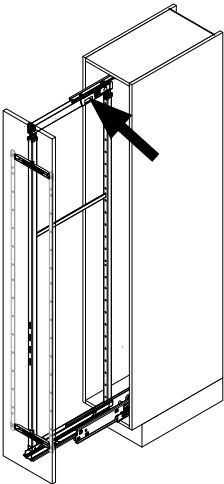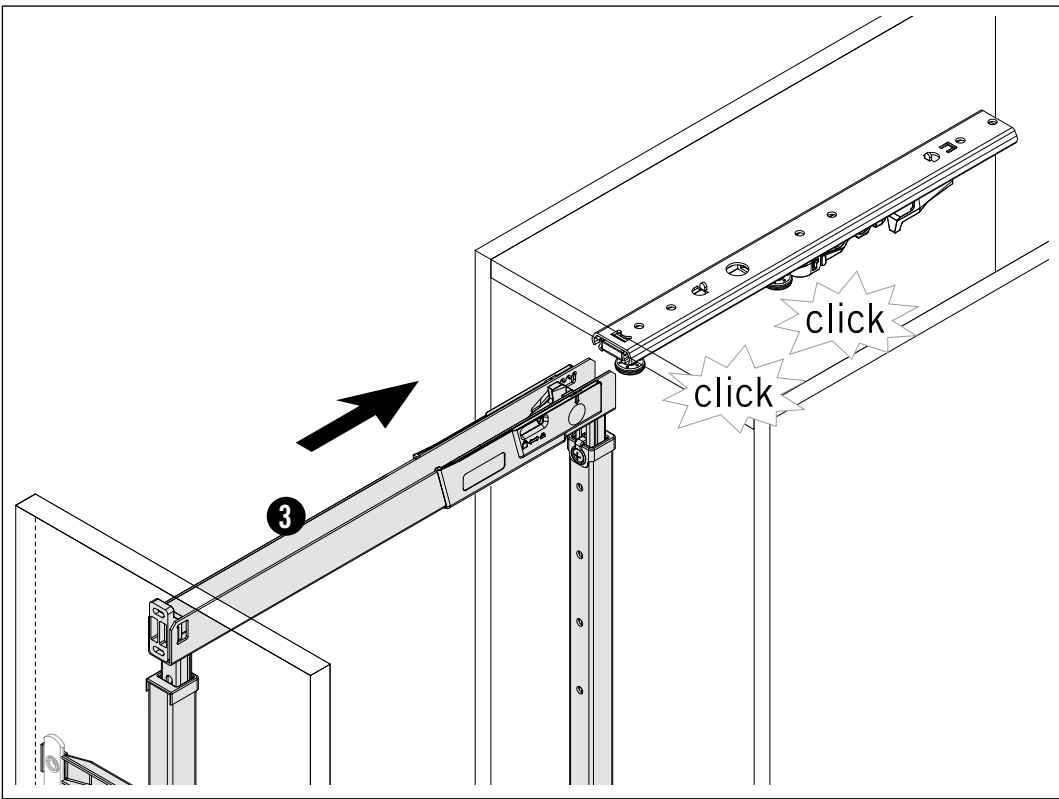

8

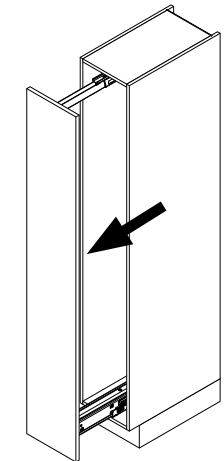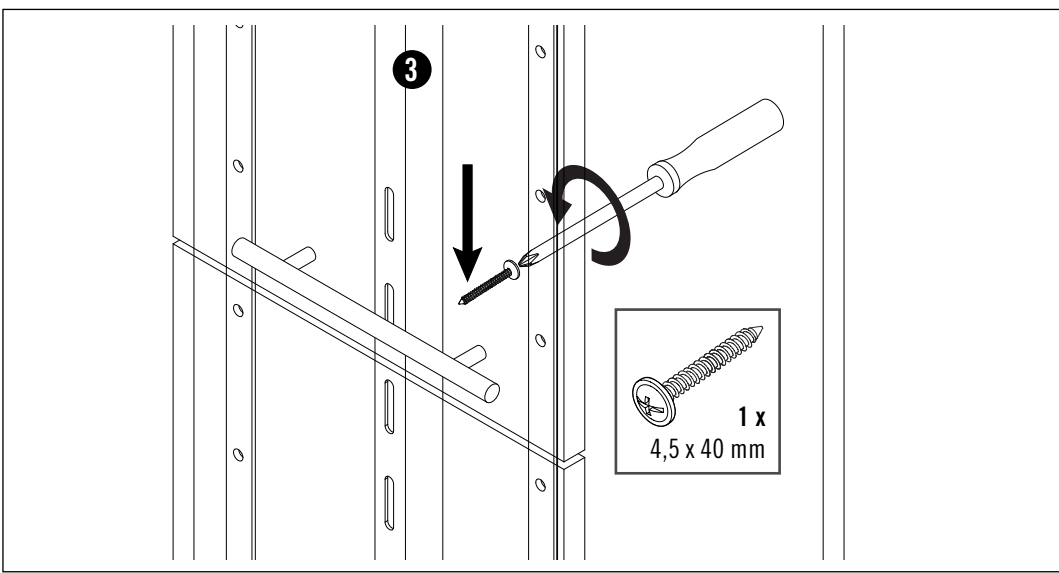





8

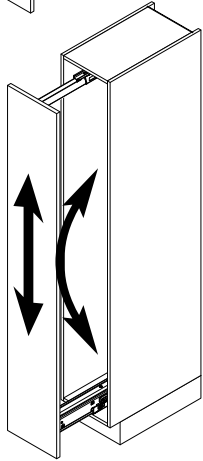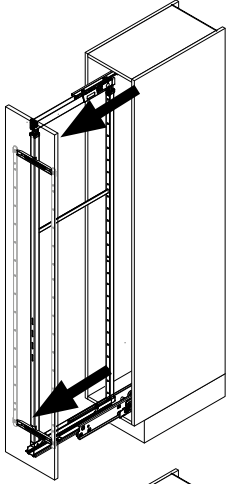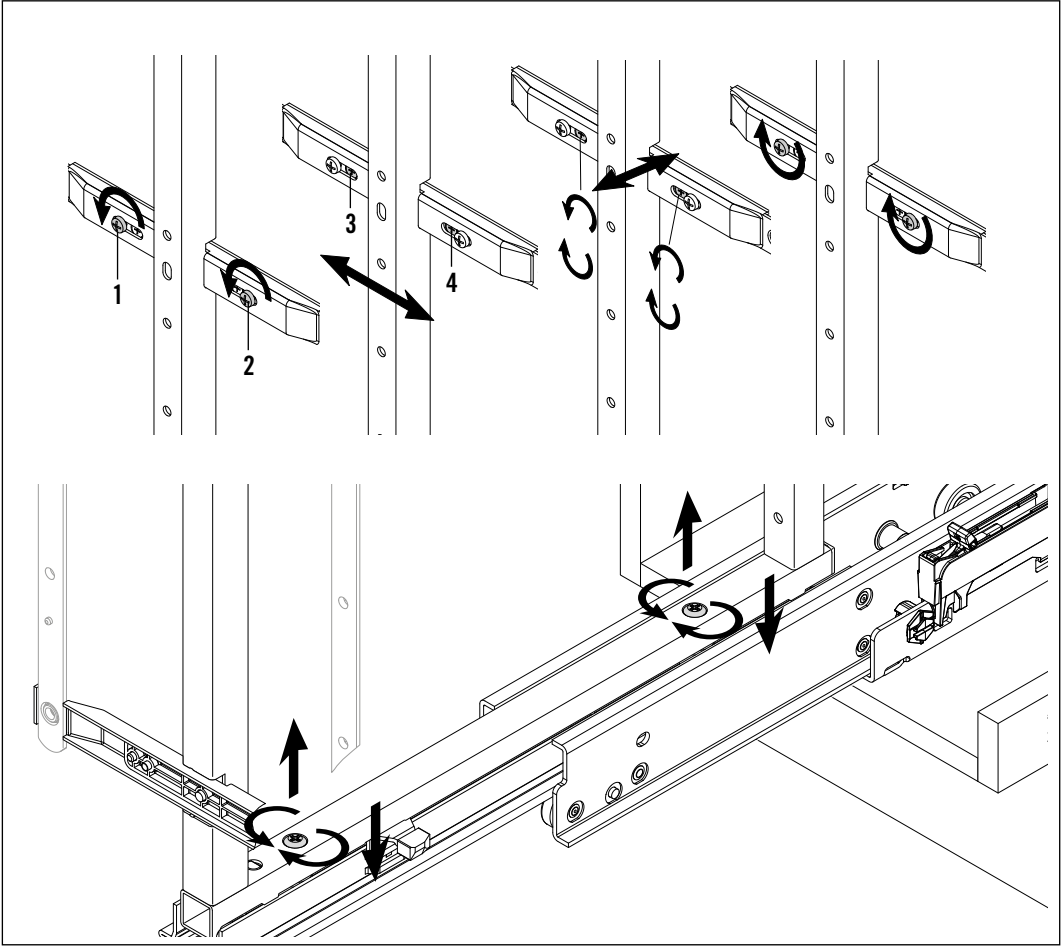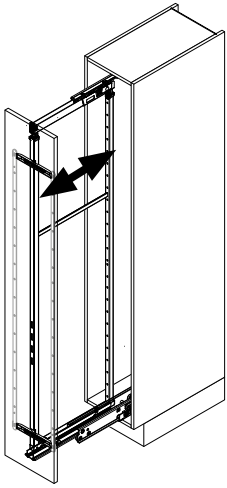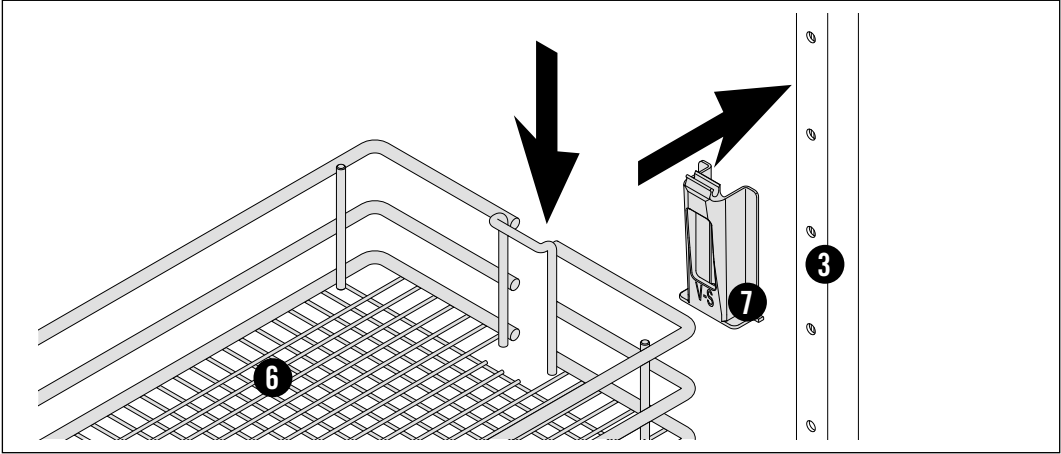


!

SW 4

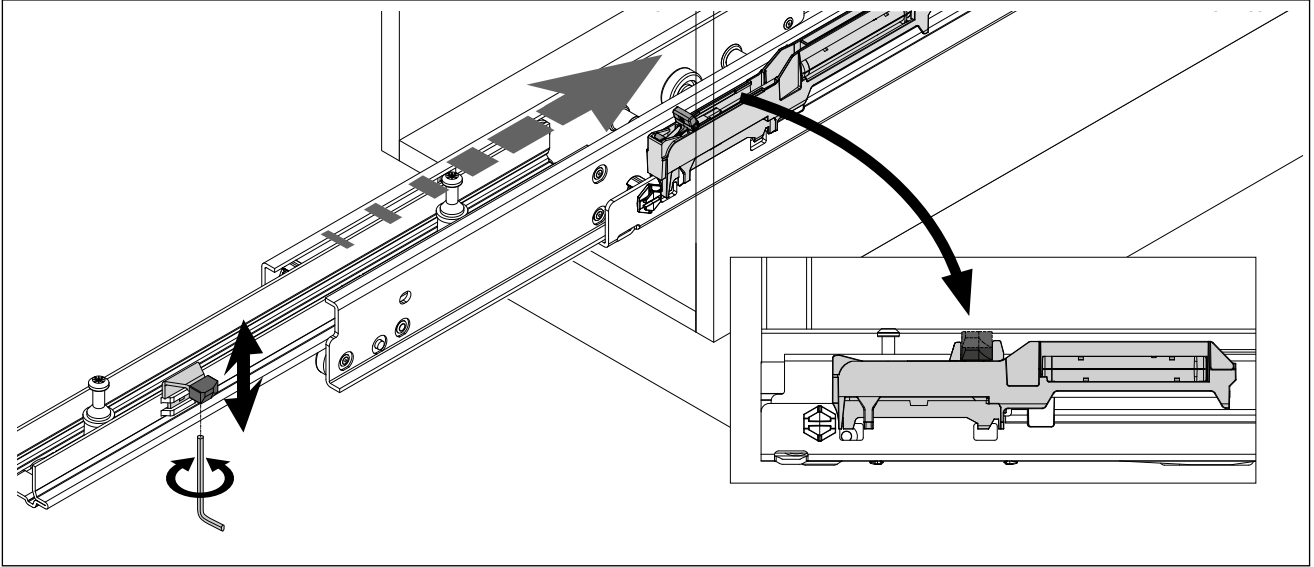

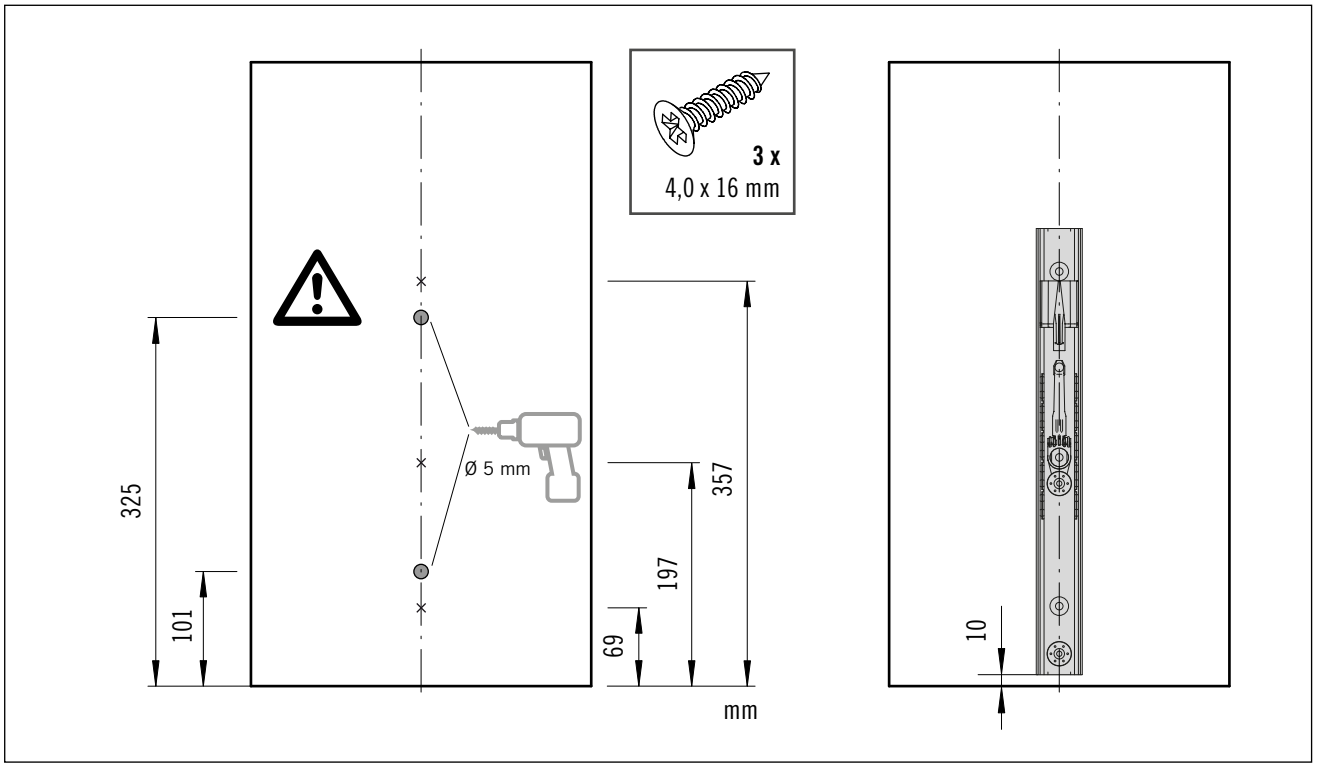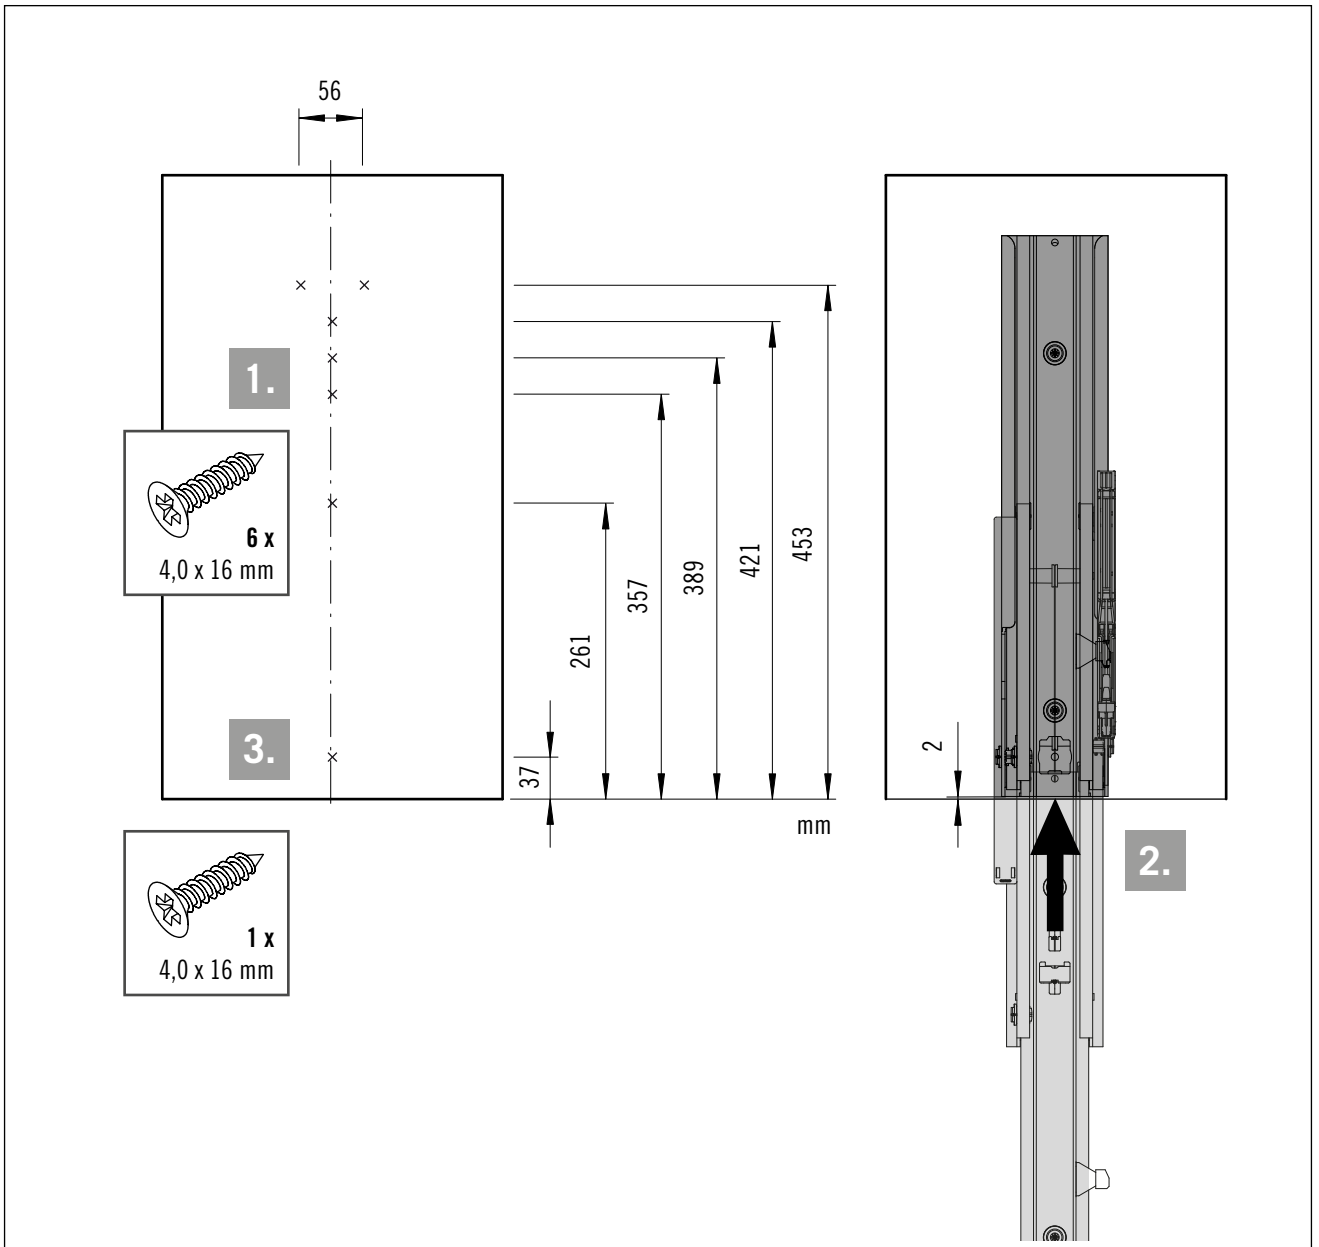
**A****B**

**C**

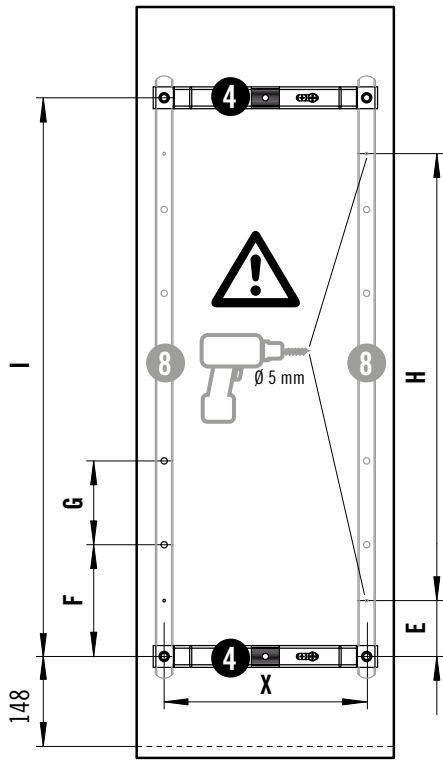

C	X	Z
300	232	257
400	325	350
450	375	400
500	425	450

mm



VS TAL® Larder	E	F	G	H	I
1	64	96	2 x 96	256	384
2	64	128	4 x 96	512	640
3	64	112	7 x 96	768	896
4	64	96	10 x 96	1024	1152
5	64	128	12 x 96	1280	1408
6	64	96	14 x 96	1408	1536
7	64	96	16 x 96	1600	1728

mm

