




OLTRE

Istruzioni di montaggio per scrochi alto basso
 Assembly instructions for top/bottom latches
 Instructions d'assemblage pour pêne haut/bas
 Instrucciones de montaje para pestillo inferior/superior





fapim®



Life in evolution

ULAR - Rev.01

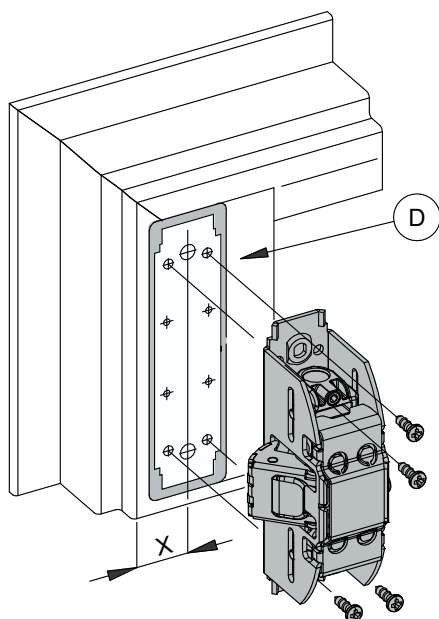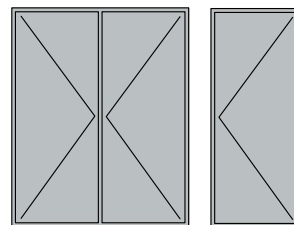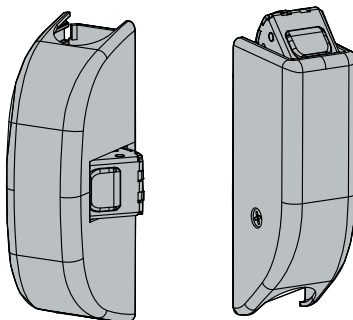


Dima
 Template
 Gabarit
 Plantilla

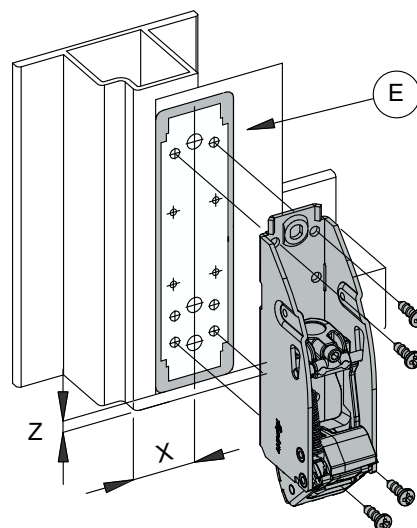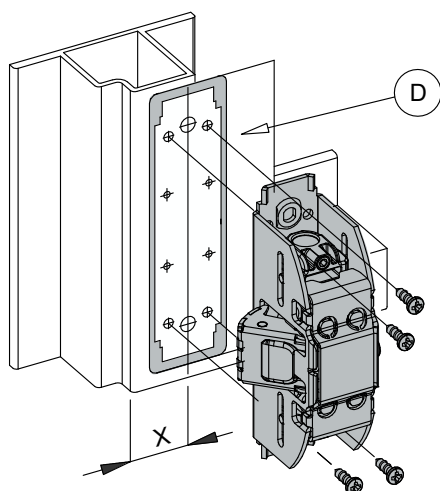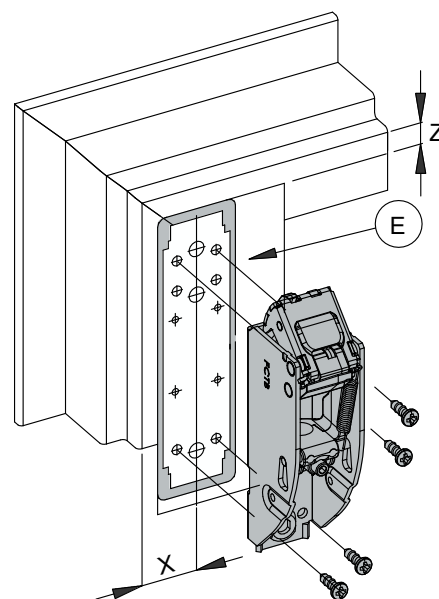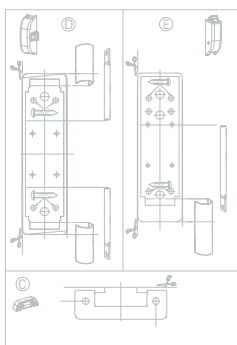


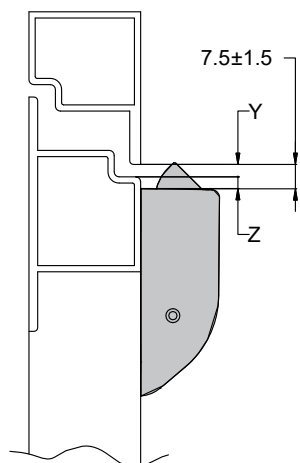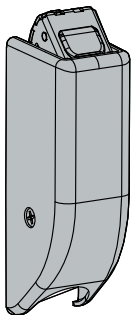


$$Z=7.5-Y$$

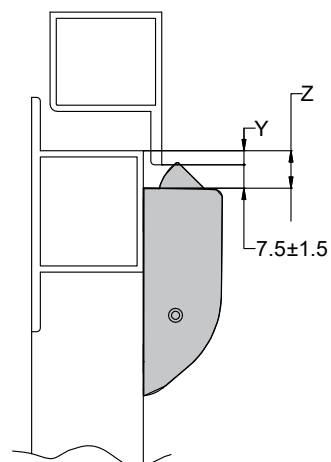


$$Z=7.5+Y$$

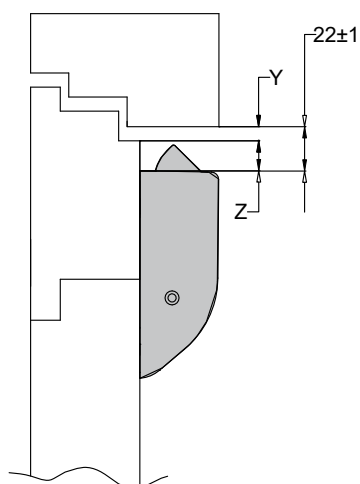

$$Z=22-Y$$


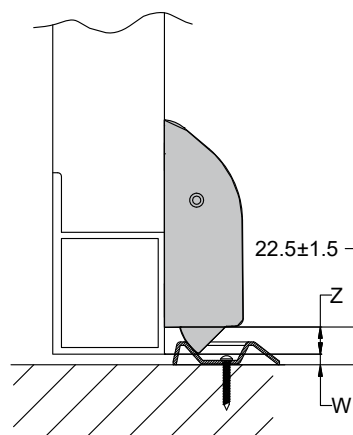


$$Z=22.5-W$$

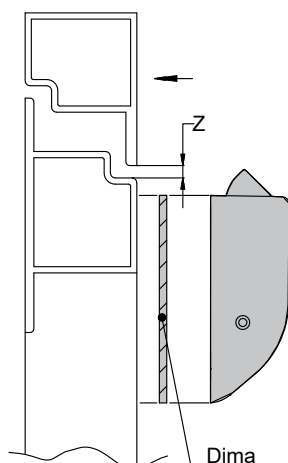


Dima
Template
Gabarit
Plantilla


E

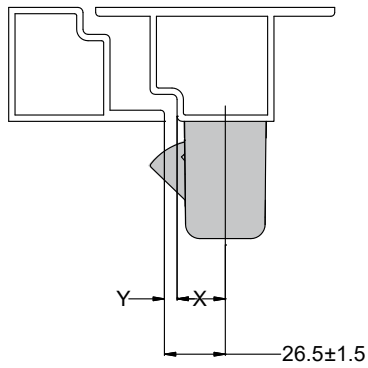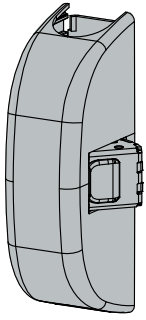


$$X=26.5-Y$$

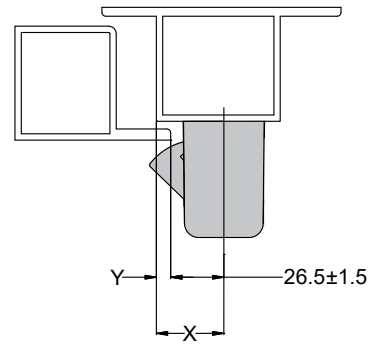

$$X=26.5+Y$$

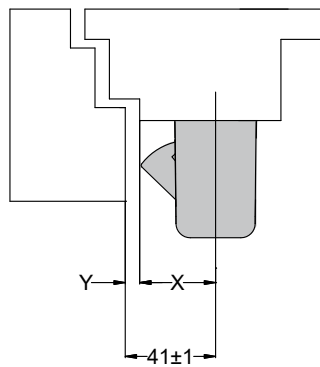

$$X=41-Y$$

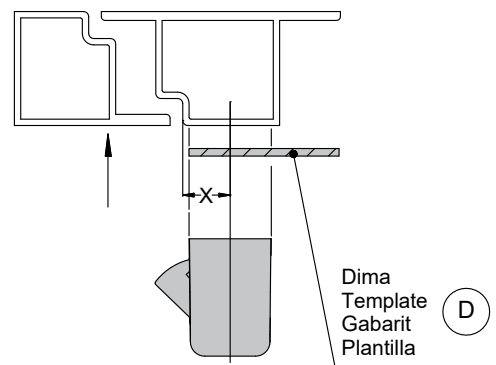

Dima
Template
Gabarit
Plantilla

D







Alluminio
Aluminium
Aluminium
Aluminio





Ferro
Iron
Acier
Hierro













Legno
Wood
Bois
Madera

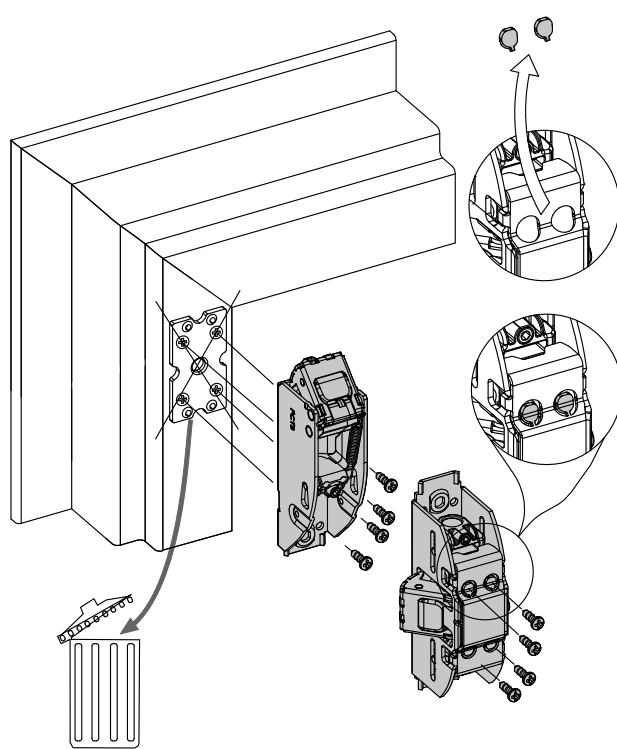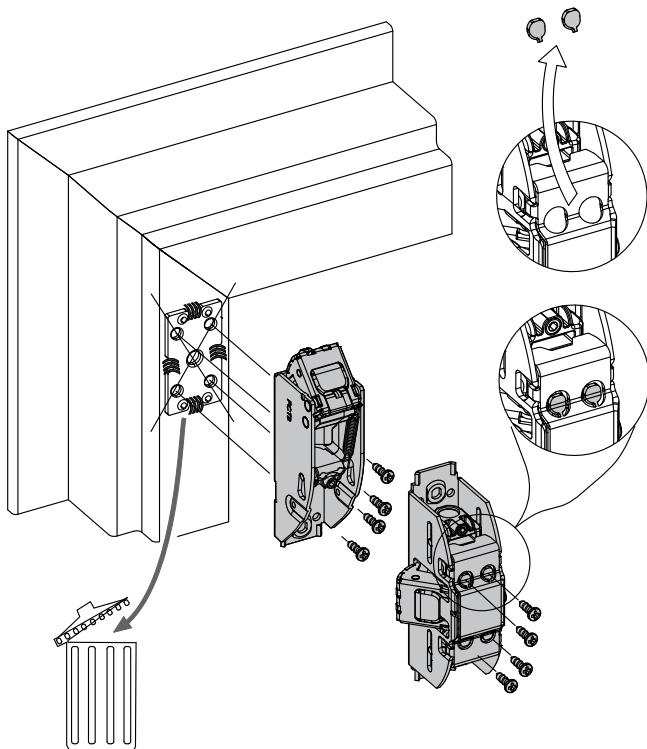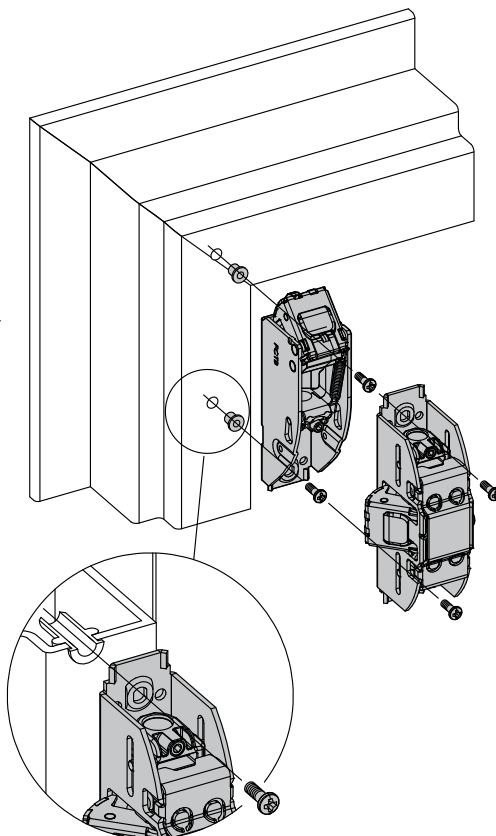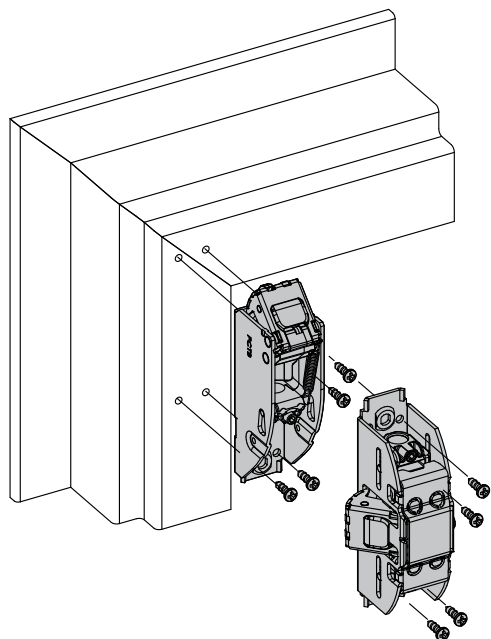

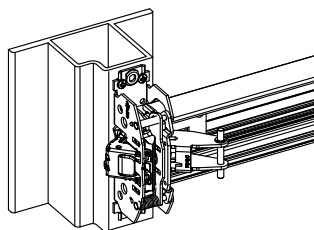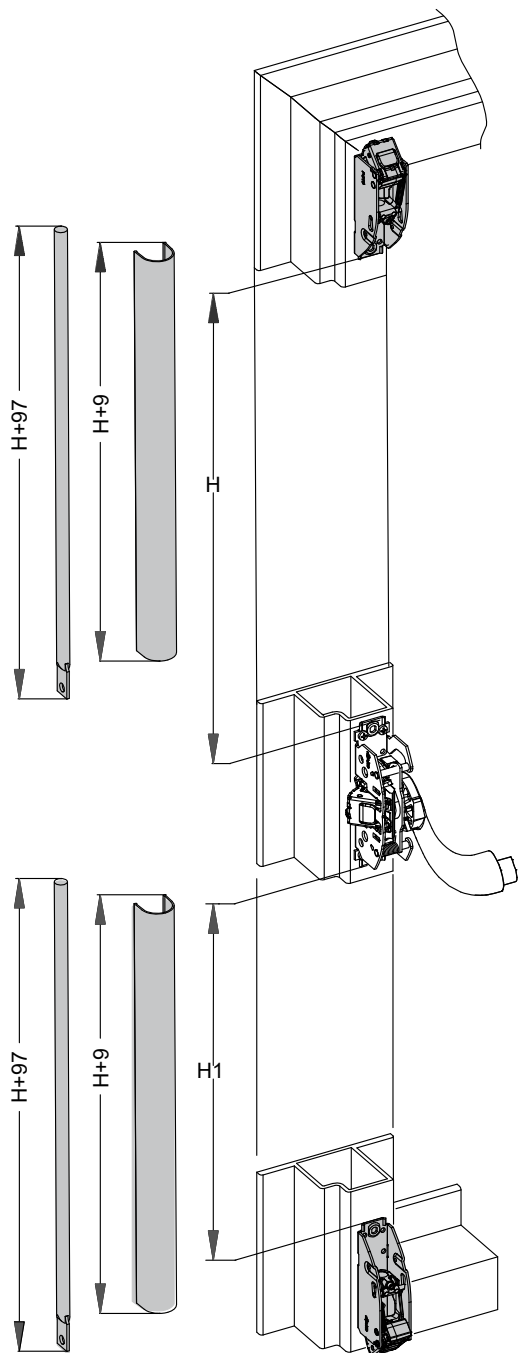










OLTRE

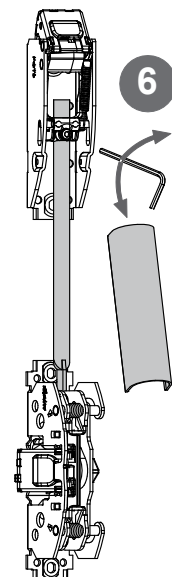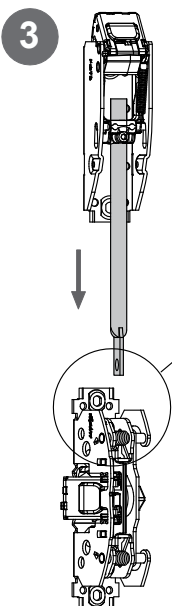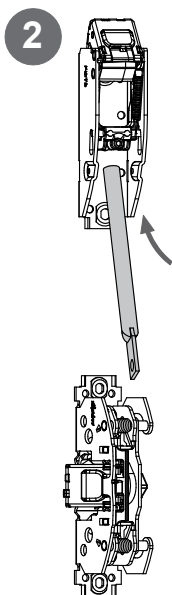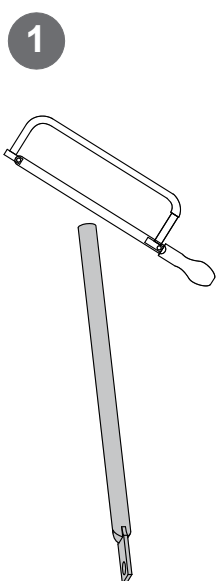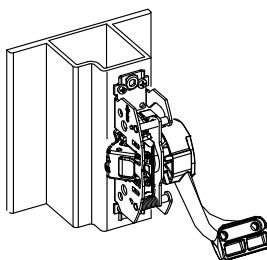

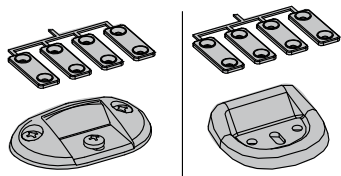

Art.8540XA

Art.8542XA

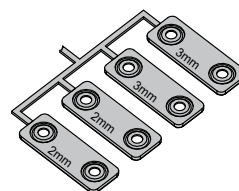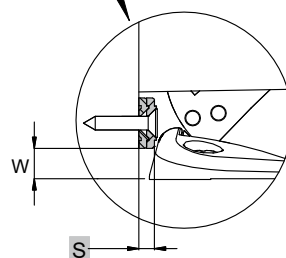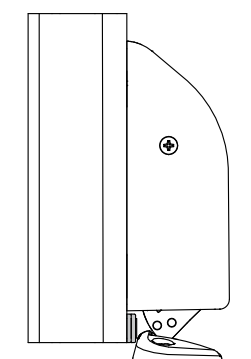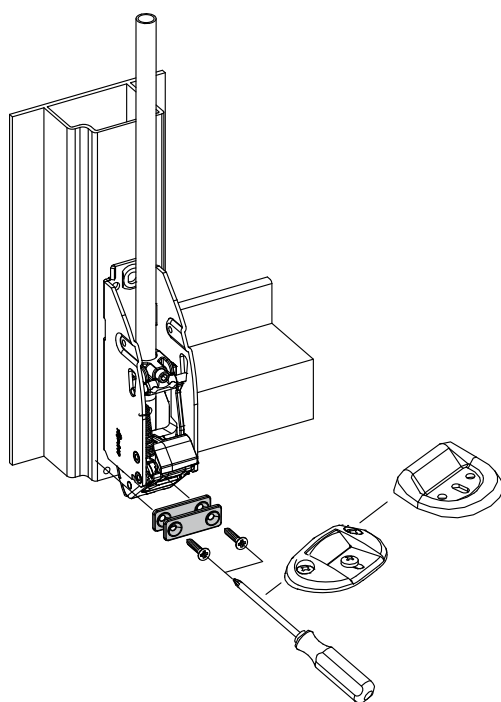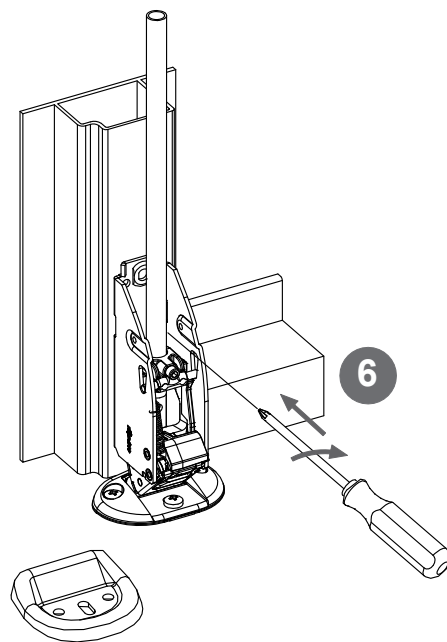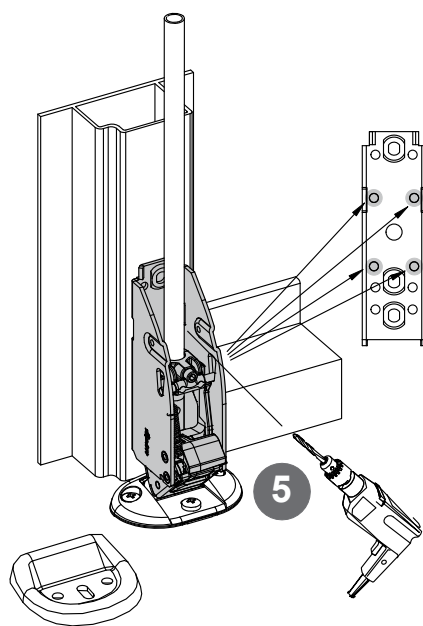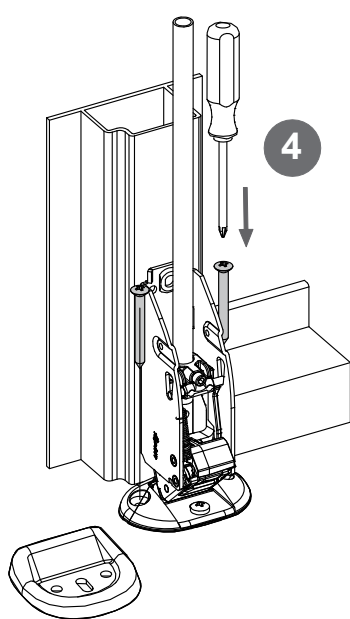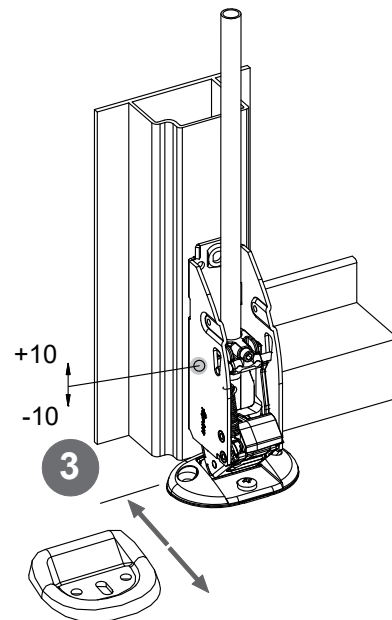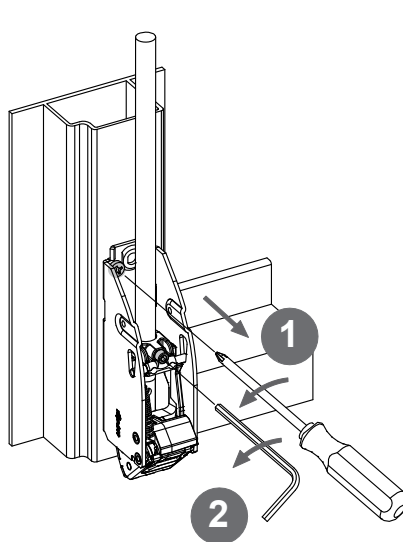

S	
2	2
3	3
4	2+2
5	2+3
6	3+3
7	2+2+3
8	3+3+2
10	3+3+2+2

