



Parts List

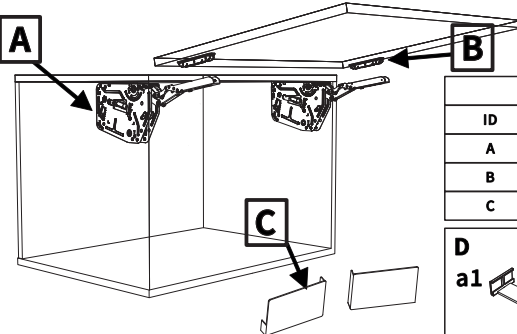

ID	Name	NO
A	Body lift	2
B	Bases	2
C	Body cover	2

D




E  x8
4x38mm

F  x8
4x14mm

G  x1


Special Installation Cases

I

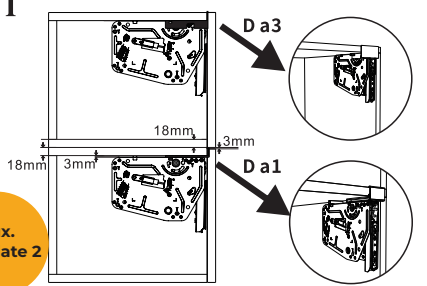


Aux. template 2



II

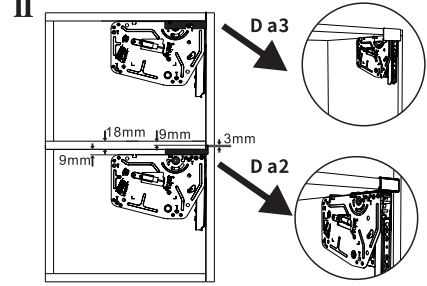

III

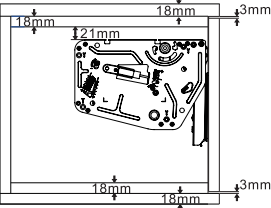

When the door height is equal with the cabinet net height, the lift installation should be moved down 21mm, to prevent collision between top and bottom edges of cabinet doors

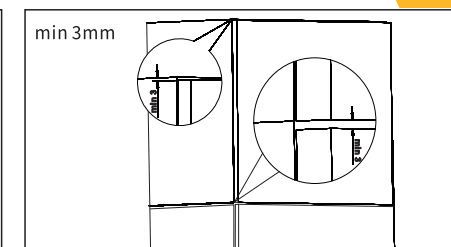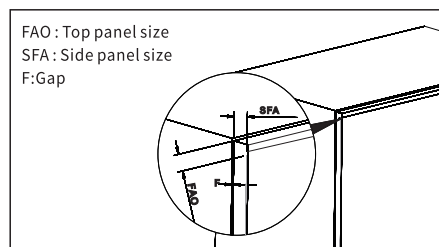


Noraml Installation Case

WARNING


Don't press down on levre if the front is not installed, to avoid injury and damage to the lift.




1 Panel Positioning and Drilling

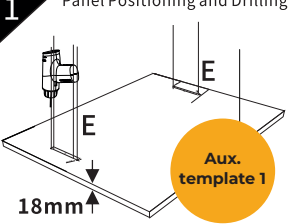


2 Installation Bases

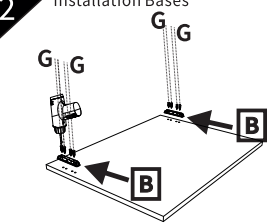



3 Install Positioning Card

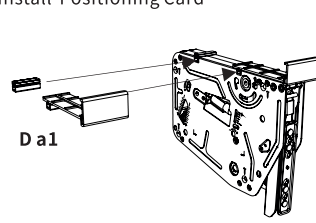


4 Put on the Lifts

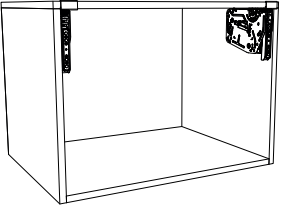


5 Lifts Installation







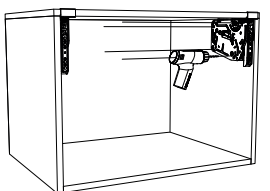
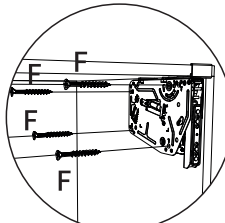



6 Remove the Positioning Card

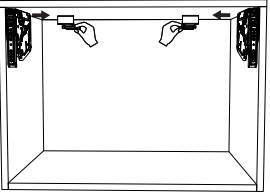

7 Remove the Safety Clip

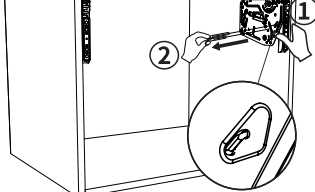

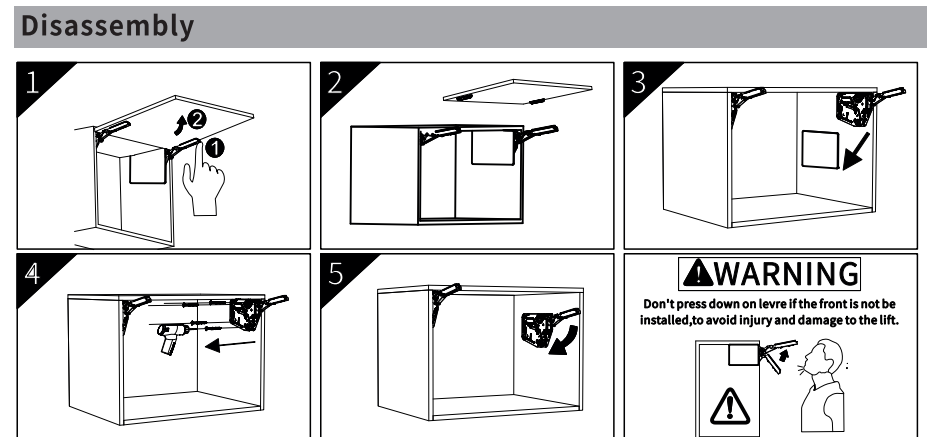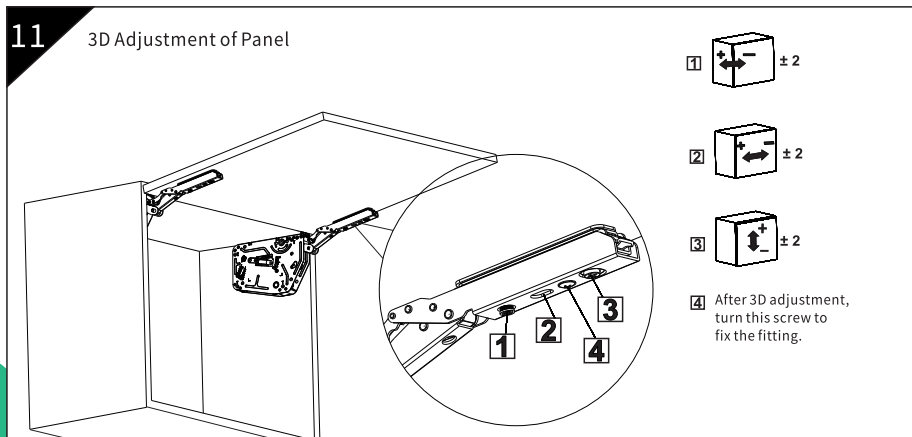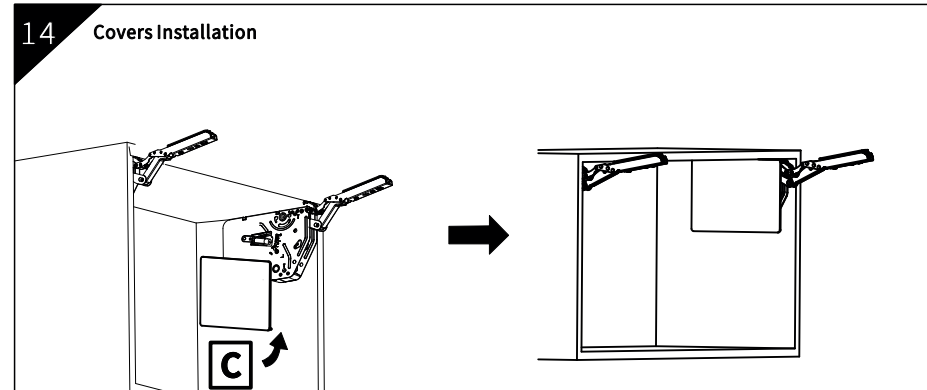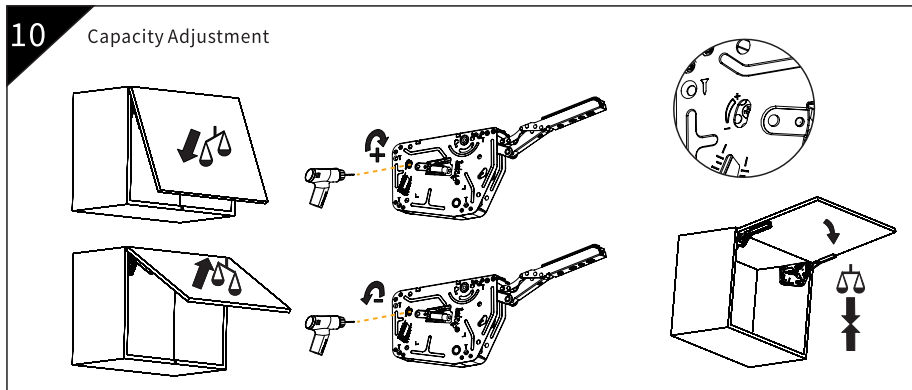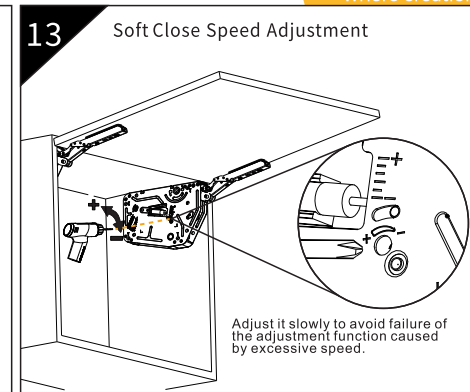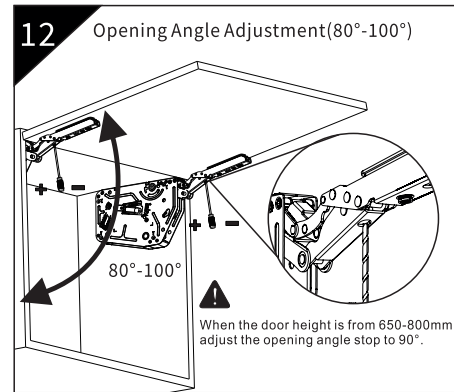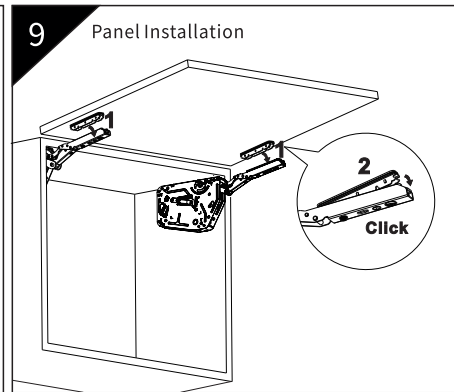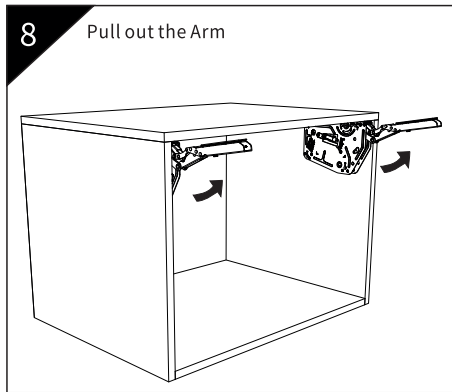

F = H x (Door weight + 2 Handle weight)
F = Force
H = Door height in mm.
Door weight = Weight of the door in kg.
Handle weight = Weight of the handle in kg.

Low (L) = 560 - 1800
Medium (M) = 1100 - 2900
High (H) = 1840 - 5200
Extra High (XH) = 4000 - 9000

		A														
		400	500	600	700	800	900	1000	1100	1200	1300	1400	1500	1600	1700	1800
H e = 16 mm	250					L	L	L	L	L	L	L	L	M	M	M
	300			L	L	L	L	L	M	M	M	M	M	M	M	H
	350	L	L	L	L	M	M	M	M	M	M	H	H	H	H	H
	400	L	L	M	M	M	M	H	H	H	H	H	H	H	H	H
	450	L	M	M	M	H	H	H	H	H	H	H	H	H	H	XH
	500	M	M	M	H	H	H	H	H	H	H	XH	XH	XH	XH	XH
	550	M	M	H	H	H	H	H	H	XH	XH	XH	XH	XH	XH	XH
	600	M	H	H	H	H	H	XH	XH	XH	XH	XH	XH	XH	XH	XH
	650	H	H	H	H	H	XH	XH	XH	XH	XH	XH	XH	XH	XH	XH
	700	H	H	H	H	XH	XH	XH	XH	XH	XH	XH	XH			
	750	H	H	H	XH	XH	XH	XH	XH	XH	XH					
	800	H	H	XH	XH	XH	XH	XH	XH	XH						

		A														
		400	500	600	700	800	900	1000	1100	1200	1300	1400	1500	1600	1700	1800
H e = 19 mm	250				L	L	L	L	L	L	M	M	M	M	M	M
	300		L	L	L	L	M	M	M	M	M	M	H	H	H	H
	350	L	L	L	M	M	M	M	H	H	H	H	H	H	H	H
	400	L	L	M	M	M	H	H	H	H	H	H	H	H	H	H
	450	M	M	M	H	H	H	H	H	H	H	H	XH	XH	XH	XH
	500	M	M	H	H	H	H	H	H	XH	XH	XH	XH	XH	XH	XH
	550	M	H	H	H	H	H	XH	XH	XH	XH	XH	XH	XH	XH	XH
	600	H	H	H	H	H	XH	XH	XH	XH	XH	XH	XH	XH	XH	XH
	650	H	H	H	XH	XH	XH	XH	XH	XH	XH	XH	XH			
	700	H	H	XH	XH	XH	XH	XH	XH	XH						
	750	H	H	XH	XH	XH	XH	XH	XH							
	800	H	XH	XH	XH	XH	XH	XH								

		A														
		400	500	600	700	800	900	1000	1100	1200	1300	1400	1500	1600	1700	1800
H e = 22 mm	250			L	L	L	L	L	L	M	M	M	M	M	M	M
	300	L	L	L	L	M	M	M	M	M	H	H	H	H	H	H
	350	L	L	M	M	M	M	H	H	H	H	H	H	H	H	H
	400	L	M	M	M	H	H	H	H	H	H	H	H	XH	XH	XH
	450	M	M	H	H	H	H	H	H	H	XH	XH	XH	XH	XH	XH
	500	M	H	H	H	H	H	H	XH	XH	XH	XH	XH	XH	XH	XH
	550	H	H	H	H	H	XH	XH	XH	XH	XH	XH	XH	XH	XH	XH
	600	H	H	H	H	XH	XH	XH	XH	XH	XH	XH	XH			
	650	H	H	XH	XH	XH	XH	XH	XH	XH						
	700	H	H	XH	XH	XH	XH	XH	XH							
	750	H	XH	XH	XH	XH	XH	XH								
	800	XH	XH	XH	XH	XH										

